



Changing The Door Swing Direction to Right Hand

1. Remove the top and bottom hinge screw caps.
2. Unscrew the top and bottom hinges, removing all of the screws.
3. Move the top hinge to the opposite bottom corner of the door, and rotate 180°. Move the bottom hinge to the opposite top corner of the door, and rotate 180°. Screw the hinges into the door.

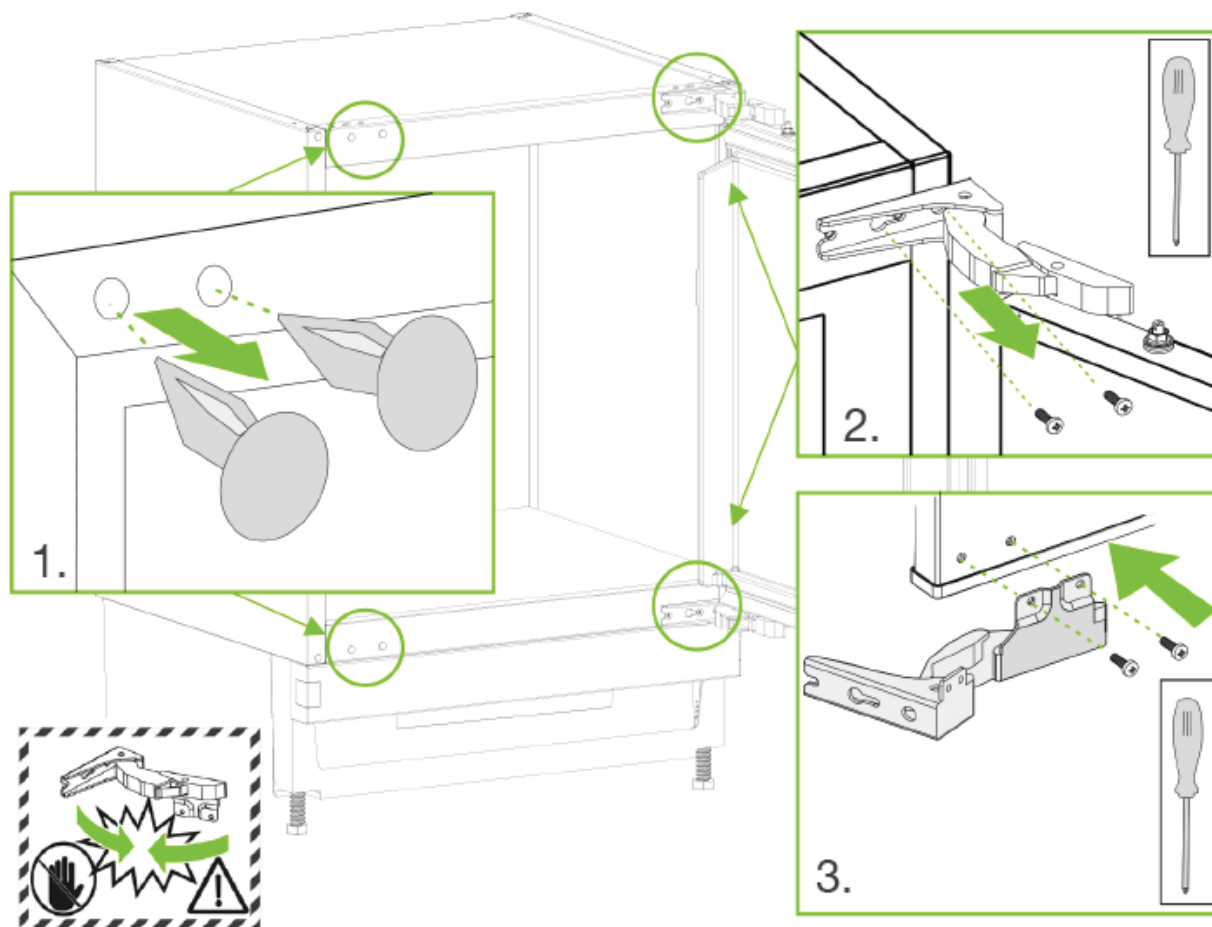

4. Screw the door back onto the appliance ensuring that it is screwed into the opposite side.
5. Insert the hinge screw caps into the opposite side of the appliance.

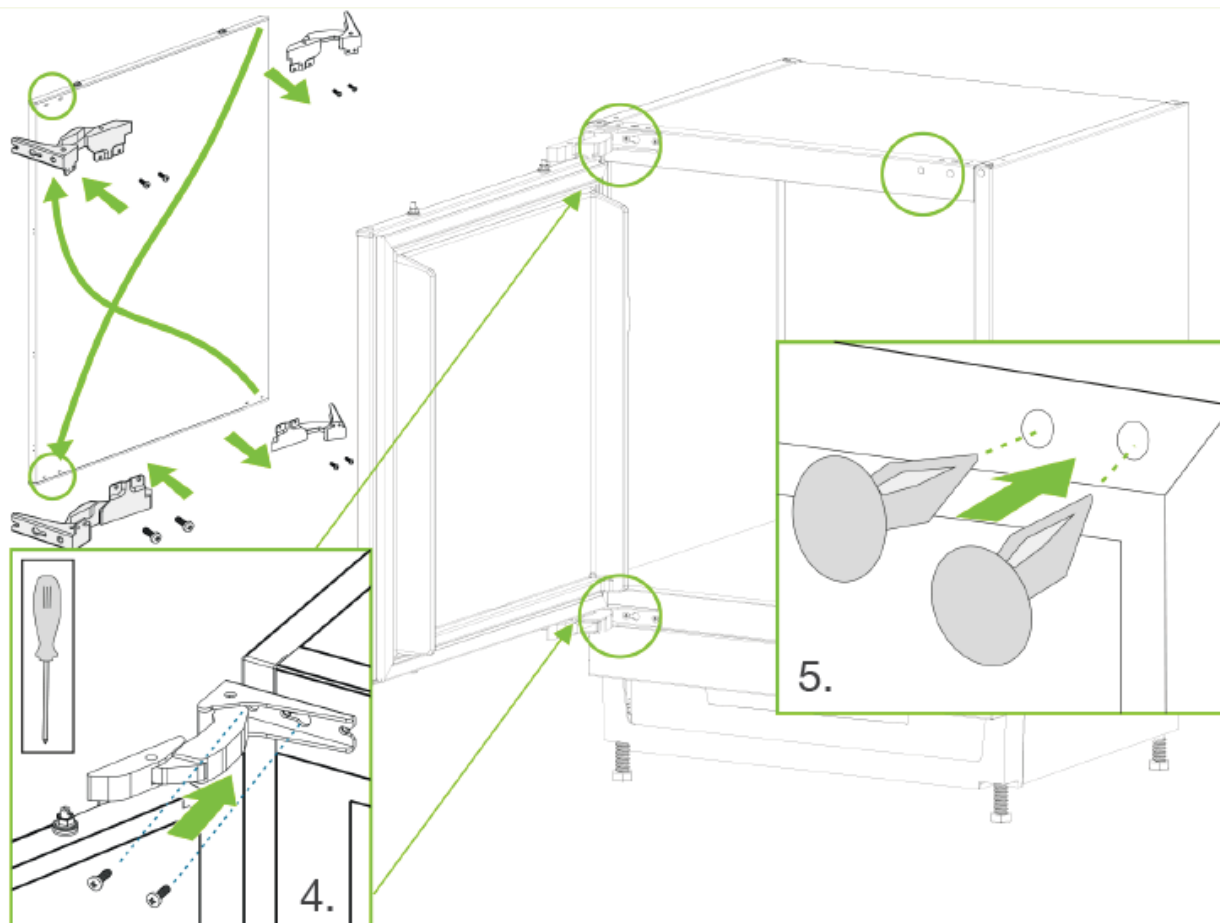

B- Changing The Freezer Door Swing Direction

1- Unscrew the screw fixing the freezer door hinge (Fig-1) and remove the freezer door (Fig-2)



Figure 1



Figure 2

2- Unscrew the screw fixing the freezer door holder and remove it. (Fig-3)



Figure 3




Figure 4

4- Assemble the freezer door and fix the freezer door hinge by tightening the screw. (Fig-5)



Figure 5



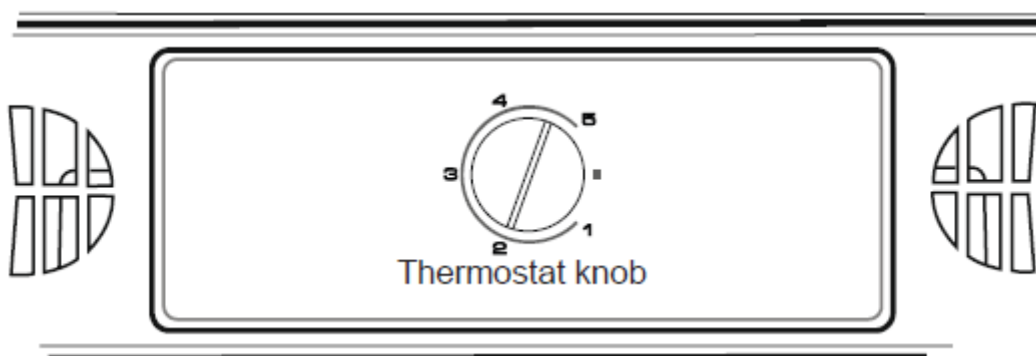

The thermostat automatically regulates the temperature inside the cooler and freezer compartments. Refrigerator temperatures can be obtained by rotating the knob to higher numbers; 1 to 3, 1 to 5 or SF

Thermostat settings:

1 – 2 : For short-term storage of food

3 – 4 : For long-term storage of food


5 : Maximum cooling position. The appliance will work longer. If required, change the temperature setting.

If device has SF position:

- Turn the knob to SF to freeze fresh food quickly. In this position, the freezer compartment will operate at lower temperatures. After your food freezes, turn the thermostat knob to its normal use position. If you do not change the SF position, your appliance work will automatically return to its last used thermostat position according to the time indicated in the note. Return the thermostat switch to the SF position and return it to normal use according to the time indicated in the note. If the thermostat switch is in the SF position when your appliance is first started, your appliance work will automatically return to the operation in the thermostat-3 position according to the time indicated in the note.


Super freezing:

This switch shall be used as superfreeze switch. For maximum freezing capacity, please turn on this switch before 24 hours placing fresh food. After placing fresh food in the freezer, 24 hours ON position is generally sufficient. In order to save energy, please turn off this switch after 24 hours from placing fresh food.

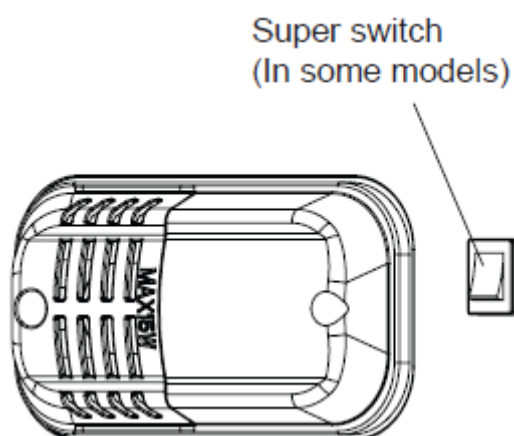

Replacement Lamp

Unscrew the screws which are fixing the lamp cover and change lamp.

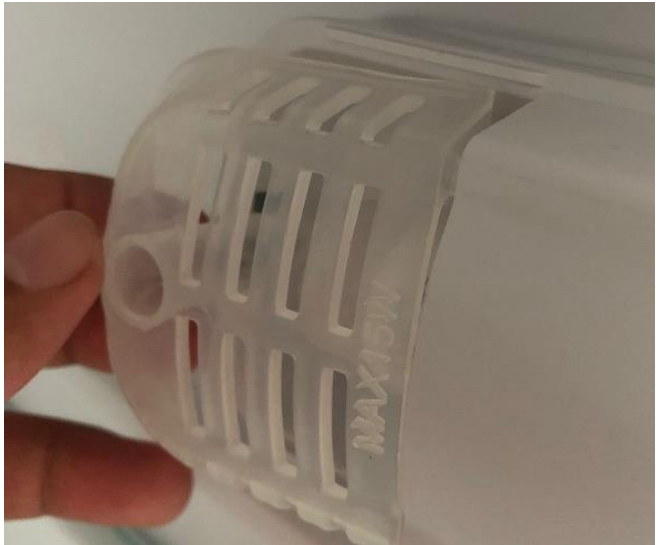

Replacement The Door Switch

Stick a tape to protect the body plastic. Flex it with the help of a tool like a slotted screwdriver.



Also flex the top-side of the switch and then displace by pulling.



Put the switch connector cable in the housing. First place the top-side of the switch and then push the bottom side.



After the switch is placed, complete the assembly by pushing.

