

1. Hold the top hinge cover and remove it toward that direction (Pic-1)



Picture-1

2. Unscrew the screws fixing the top hinge and remove it. (Pic-2)



Picture-2

3. Displace the top door (Pic-3)



Picture-3

4. Unscrew the two screws fixing the middle hinge and remove it. (Pic-4)



Picture-4

5. Displace the bottom door. (Pic-5)



Picture-5

6. Unscrew the adjustable foot (Pic-6)



Picture-6

7. Unscrew the bottom hinge screws. (Pic-7)



Picture-7

8. Unscrew the bottom hinge pin and screw it to other hole. (Pic-8)

9. Screw the bottom hinge to the left bottom side of refrigerator. Screw the adjustable foot there. (Pic-9)



Picture-8



Picture-9

10. Unscrew the two screws fixing stopper and stopper support plate under the cooler door. After that screw the other side. (Pic-10)



Picture-10

11. Replace the top bushing and the top bushing cap at the bottom door. (Pic-11)



Picture-11

12. Remove the support plastic and then metal stopper placed under the upper door. (Picture-12.2) Then re screw these parts to the other side symmetrically. (remember the screw for the metal part must be screwed to the hole which is closer to the bushing). Do not use cordless screwdriver for these screws.



Picture-12.1



Picture-12.2

13. Remove the hinge cover on the top panel and replace to other side.(Pic-13)



Picture-13

14. Place the bottom door (Pic-14.1) and rotate the middle hinge by 180°. After that, screw to the right side on the middle sheet. (Pic-14.2)



Picture-14.1



Picture-14.2

15. Place the top door to the middle hinge and screw the top hinge to the top panel. (Pic-15)

16. Place the top hinge cover. (Pic-16)



Picture-15



Picture-16

Thermostat Setting



The freezer and refrigerator thermostat automatically regulates the inside temperature of the compartments. By rotating the knob from position 1 to 5, colder temperatures can be obtained. In cold seasons you can set lower thermostat positions in order to decrease the energy consumption.

Important note: Do not try to rotate knob beyond 1 position it will stop your appliance.

Thermostat level;

1 – 2 : For short-term storage of food in the freezer compartment, you can set the knob between minimum and medium position.

3 – 4 : For long-term storage of food in the freezer compartment, you can set knob to the medium position.

5 : For freezing the fresh food. The appliance will work longer. Once the food is fully frozen reset the thermostat to its original position.

Replacement of Thermostat

CAUTION: The plug must be pulled out before the mainboard group is removed.

1) Remove screws which are attached two sides of the thermostat



3) Take off all cable connection and pull thermostat bulb out



4) Take off the lamp and rotate the lamp holder to the position at below picture



INSTRUCTIONS


5) Firstly take off the button and screw, change the thermostat



6) Place the thermostat, screws is tightened, insert the button

7) Place and turn the lamp holder to the position to lock

8) Connect cables as shown below

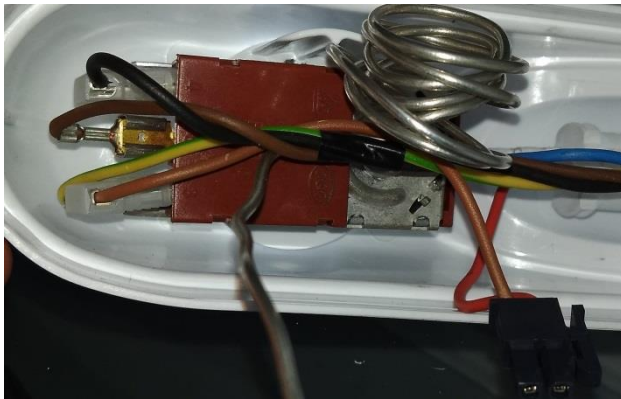

9) Send the thermostat bulb pipe throughout the hole until it end

10) Plug the black socket to the frige

11) Close the lamp cover ve screws are tightened which are attached two sides of the thermostat

REFRIGERANT CYCLE DIAGRAM

