

A- Changing The Door Swing Direction to Right Hand

1- Unscrew the two screws which are fixing the top table on the back side. (Fig 1)
Also remove the top table. (Fig 2)

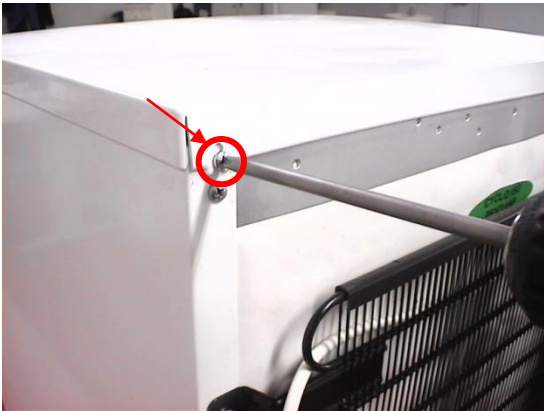


Figure 1

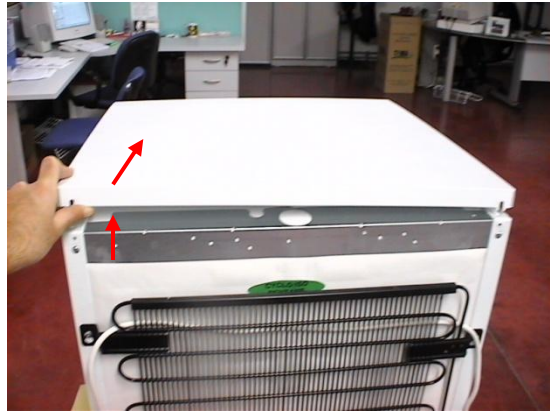


Figure 2

3- Lie down the appliance to the left side.
Dismantle both leveling foot. (Fig 3)

4- Unscrew the bottom hinge fixing screws
and remove it. (Fig-4)



Figure 3



Figure 4

5- Screw the two fixing screws to the right
side. (Fig-5)

6- Dismantle the leveling foot from the left
side. (Fig-6)



Figure 5



Figure 6

7- Unscrew the bottom hinge pin and screw in the next hole. (Fig-7)



Figure 7

8- Remove the door. Unscrew the pin of the right hinge. (Fig 8)



Figure 8

9- Screw the pin on the left hinge. (Fig 9)



Figure 9

10- Replace the top bushing and top bushing cap. (Fig-10.1-Fig-10.2)
(You can use the bushing cap that is put in the user manual)



Figure 10.1



Figure 10.2

11- Remove the bottom bush and reassemble it to the left side. (Fig-11)

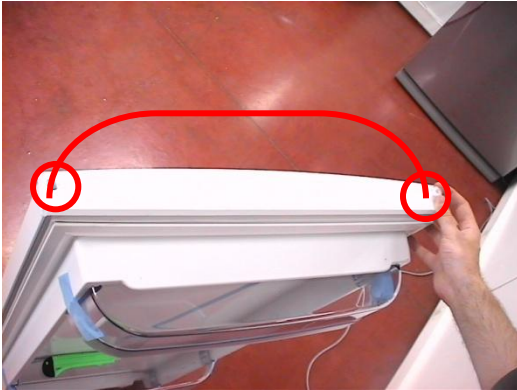


Figure 11

12- Assemble the door to the top hinge. (Fig-12)



Figure 12

13- Assemble the door together with bottom hinge. (Fig-13)



Figure 13

14- Then screw the bottom hinge to the left side of the refrigerator. (Fig-14)



Figure 14

15- Screw the leveling foot to right side. (Fig-15)



Figure 15

16- Screw the leveling foot to right side. (Fig-16) Finally, assemble the top table and screw the two screws on the back side. (Repeating the reverse operation of item 1)



Figure 16

B- Changing The Freezer Door Swing Direction

1- Unscrew the screw fixing the freezer door hinge (Fig-1) and remove the freezer door (Fig-2)



Figure 1



Figure 2

2- Unscrew the screw fixing the freezer door holder and remove it. (Fig-3)



Figure 3



Figure 4

4- Assemble the freezer door and fix the freezer door hinge by tightening the screw. (Fig-5)



Figure 5



C- Changing the Thermostat :

- 1) Remove the lamp cover and unscrew the fixing screw.
- 2) Remove the screw cap and unscrew the fixing screw.
- 3) Remove the thermostat box by pulling it and disconnecting the wire connector.
- 4) Remove the thermostat knob by pulling forward. Loosen the nut fixing the thermostat.
- 5) Pull out the thermostat bulb from the housing.
- 6) Replace the thermostat with a new one and assemble the thermostat box following the steps backwards.

D - Thermostat Knob :

- 1) This knob is used to control the temperature of the freezer and refrigerator parts automatically. It can be set to any value between “0” and “5” positions.
- 2) “ 0 ” position indicates that the thermostat is “off ”.The refrigerator is “off ” on this setting.
- 3) By turning the knob between “1” and “5”, you can increase or decrease the cooling degree.
- 4) The refrigerator is designed to get optimum performance when the thermostat knob is set between position “2” to “4”.

