



1. Plastic scraper
2. Ice tray
3. Thermostat
4. Freezer upper room cover
5. Freezer bottom room cover
6. Freezer compartment drawers
7. Levelling Foot

Control panel



Freezer thermostat automatically regulates the inside temperature of the compartments. By rotating the knob from position “1” to “5”, colder temperatures can be obtained.

Important note: Do not try to rotate knob beyond 1 position it will stop your appliance.

Freezer Thermostat Setting;

1-2: For short-term storage of food in the freezer compartment, you can set the knob between minimum and medium position.

3-4: For long-term storage of food in the freezer compartment, you can set knob medium position.

5 : For freezing the fresh food. The appliance will run for colder temperatures.

Note that• The ambient temperature, temperature of the freshly stored food and how often the door is opened, affects the temperature in the freezer compartment. If required, change the temperature setting.

- For best internal temperature the indicator in the freezer thermostat should be positioned between 2 and 4.

Turning On The Appliance

- When you first switch on the appliance, for starting a suitable cooling, the appliance should work 24 hours continuously until it cools down to sufficient temperature.
- In this time do not open the door so often and place a lot of food inside the appliance.
- If the unit is switched off or unplugged, you must allow at least 5 minutes before restarting or re-plugged the unit in order not to damage the compressor.

1. Remove the hinge cover. (Fig-1)



Figure-1

2. Unscrew the screws fixing the upper hinge and remove it. (Fig-2)



Figure-2

3. Replace the door top bushing (Fig-3.1) and top bushing cap. (Fig-3.2)



Figure-3.1



Figure-3.2

4. Remove the adjustable feet. (Fig-4)



Figure-4

5 . Unscrew the bottom hinge fixing screws and insert them the left side. (Fig-5.1 / Fig-5.2)



Figure-5.1



Figure-5.2

6. Remove the door bottom bushing and insert it into left hole. (Fig-6)



Figure-6

8. Assemble the door. Screw the top hinge and hinge cover. (Fig-7.1 / Fig-7.2)



Figure-7.1



Figure-7.2