


- 1. Plastic scraper
- 2. Ice tray
- 3. Freezer control panel
- 4. Freezer upper room cover
- 5. Freezer bottom room cover
- 6. Freezer compartment drawers
- 7. Levelling Foot

Control panel

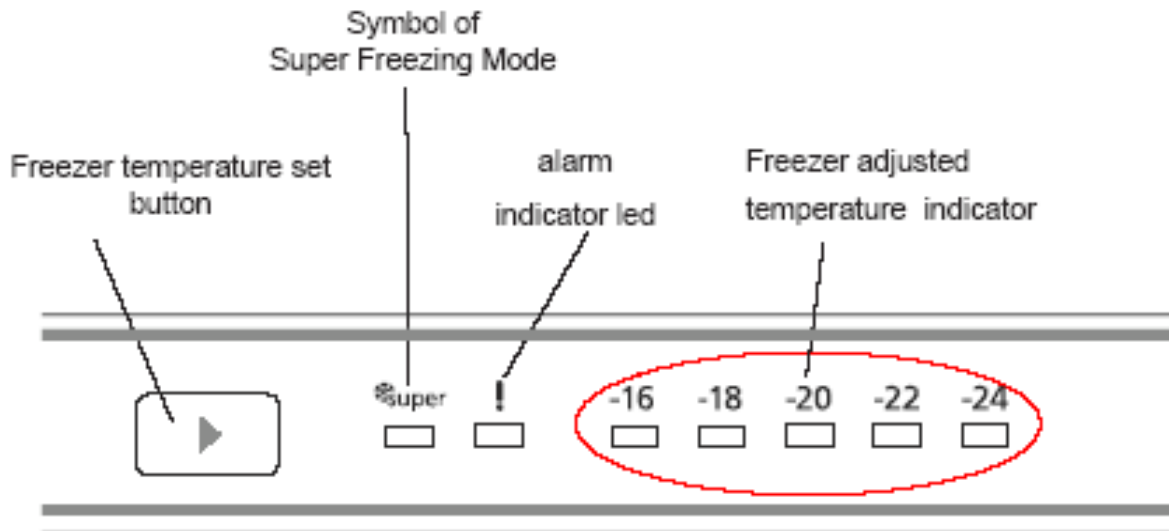

Freezer partition temperature setting button

This button allows setting temperature of the freezer. In order to set values for freezer partition, press this button. Use this button also to activate SF mode.

Alarm light

In case of a problem within the fridge, the alarm led will release red light

Super Freezer Mode

When would it be used?

- To freeze huge quantities of food.
- To freeze fast food.
- To freeze food quickly.
- To store seasonal food for a long time. How to use?
- Press temperature set button until super freezing light comes on.
- Super freezing led will light during this mode.
- Maximum amount of fresh food (in kilograms) to be frozen within 24 hours is shown on the appliance label.
- For optimal appliance performance in maximum freezer capacity, set the appliance to active SF mode 3 hours before you put the fresh food into the freezer.



During this mode:

- If you press temperature set button, the mode will be cancelled and the setting will be restored from -16 °C.

Note: "Super Freezer" mode will be automatically cancelled after 30 hours or when freezer sensor temperature drops beneath -32 °C.

Freezer Temperature Settings

- The initial temperature of the Setting Display is -18°C.
- Press freezer setting button once.
- Every time you press the button, the setting temperature will decrease. (-16°C, -18°C, -20°C,.. super freezing)
- If you press freezer setting button until super freezer symbol is displayed on Freezer Settings Display and you do not press any button within the following 3 seconds, Super Freezing will blink.
- If you keep on pressing, it will restart from last value.

	FREEZER – 2451	
	FAULT CODES	



There is no Servis mode and Demo mode in this product.

There is no door opening warning in this product.

Alarm symbol blinks : Sensor defected (short or open)

Alarm symbol lights continuously : Insufficient freezing



Alarm

CHANGING THE DOORWAY DIRECTION

1. Remove the hinge cover. (Fig-1)



Figure-1

2. Unscrew the screws fixing the upper hinge and remove it. (Fig-2)



Figure-2

3. Replace the door top bushing (Fig-3.1) and top bushing cap. (Fig-3.2)



Figure-3.1



Figure-3.2

4. Remove the adjustable feet. (Fig-4)



Figure-4

CHANGING THE DOORWAY DIRECTION

5 . Unscrew the bottom hinge fixing screws and insert them the left side. (Fig-5.1 / Fig-5.2)



Figure-5.1



Figure-5.2

6. Remove the door bottom bushing and insert it into left hole. (Fig-6)



Figure-6

8. Assemble the door. Screw the top hinge and hinge cover. (Fig-7.1 / Fig-7.2)



Figure-7.1



Figure-7.2

Replacement Sensor

1. Remove the sensor cover with the help of a screwdriver and then disconnect the sensor connector. (Pic-1)
2. Place the bottom-front details of the cover to its housing and then place the top cover detail to the housing by flexing it with a screwdriver. (Pic-2)



Picture-1



Picture-2

CAUTION: Pay attention not to damage to the sensor cover details!