

A- Changing The Door Swing Direction to Right Hand

1- Unscrew the two screws fixing the top hinge (Fig-1) and remove the freezer door. (Fig-2)



Figure 1



Figure 2

2- Unscrew the two screws fixing the middle hinge side bracket and remove it. (Fig-3)



Figure 3

3- Unscrew the two screws fixing the middle hinge (Fig-4) and remove the refrigerator door. (Fig-5)



Figure 4



Figure 5

4- Remove the bottom hinge pin (Fig-5) and insert it to the left side foot. (Fig-6)



Figure 5



Figure 6

5- Unscrew the middle hinge side bracket on the left and remove it. (Fig-7)
Remove the middle hinge screw caps (big) on the left side.



Figure 7

6- Assemble the refrigerator door. Rotate the middle hinge by 180° and screw it to the left side. (Fig-8) Then screw the middle hinge side bracket on the middle hinge. (Fig-9)



Figure 8



Figure 9

7- Remove the top hinge screw caps (big) on the left side (Fig-10) and insert them to the right side. (Fig-11) (You can find the new caps in the user manual bag)



Figure 10



Figure 11

8- Unscrew the pin of the hinge from Hole 1, rotate the top hinge by 180° and screw the pin to Hole 2. (Fig-12)



Figure 12

9- Assemble the freezer door and screw the top hinge to the left side. (Fig-13)



Figure 13

10- Screw the middle hinge side bracketed on the right of refrigerator. (Fig-14) and insert the middle hinge screw caps (big) on the right side. (Fig-15) (You can find the new caps in the user manual bag)



Figure 14




Figure 15

B - Changing The Thermostat :

- 1) Remove the lamp cover and unscrew the fixing screw.
- 2) Remove the screw cap and unscrew the fixing screw.
- 3) Remove the thermostat box by pulling it and disconnecting the wire connector.
- 4) Remove the thermostat knob by pulling forward. Loosen the nut fixing the thermostat.
- 5) Pull out the thermostat bulb from the housing.
- 6) Replace the thermostat with a new one and assemble the thermostat box following the steps backwards.

C - Thermostat Knob :

- 1) This knob is used to control the temperature of the freezer and refrigerator parts automatically. It can be set to any value between “0” and “5” positions.
- 2) “0” position indicates that the thermostat is “off”. The refrigerator is “off” on this setting.
- 3) By turning the knob between “1” and “5”, you can increase or decrease the cooling degree.
- 4) The refrigerator is designed to get optimum performance when the thermostat knob is set between position “2” to “4”.

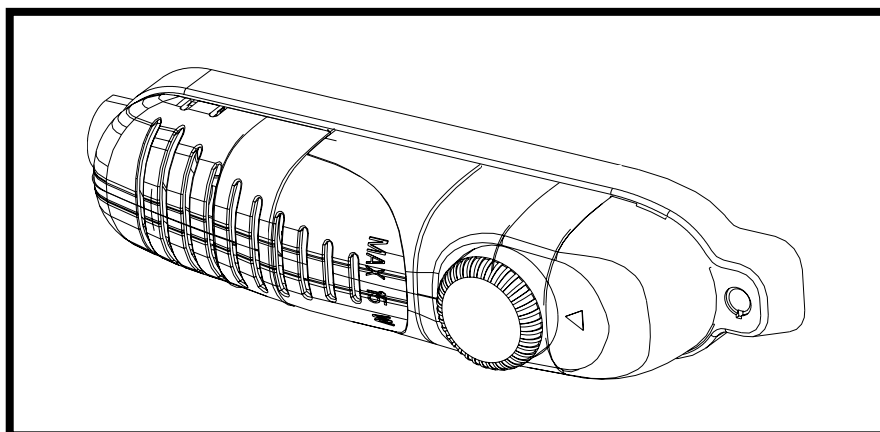

BUILT IN – DOUBLE DOOR
REFRIGERANT CYCLE DIAGRAM

