


**Thermostat Setting**

**Thermostat settings:**

**1 – 2** : For short-term storage of food

**3 – 4** : For long-term storage of food

**5** : Maximum cooling position. The appliance will work longer. If required, change the temperature setting.

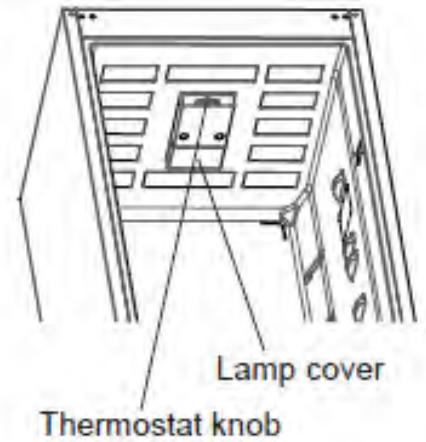

**If device has SF position:**

- Turn the knob to SF to freeze fresh food quickly. In this position, the freezer compartment will operate at lower temperatures. After your food freezes, turn the thermostat knob to its normal use position. If you do not change the SF position, your appliance work will automatically return to its last used thermostat position according to the time indicated in the note. Return the thermostat switch to the SF position and return it to normal use according to the time indicated in the note. If the thermostat switch is in the SF position when your appliance is first started, your appliance work will automatically return to the operation in the thermostat-3 position according to the time indicated in the note. The super mode will be cancel automatically after max 48 hours.

**Reversing the door**

**1.** Hold the top hinge cover and remove it toward that direction (Pic-1)



**Picture-1**

**2.** Unscrew the screws fixing the top hinge and remove it. (Pic-2)



**Picture-2**

**3.** Displace the top door (Pic-3)



**Picture-3**

**4.** Unscrew the two screws fixing the middle hinge and remove it. (Pic-4)



**Picture-4**

5. Displace the bottom door. (Pic-5)



**Picture-5**

6. Unscrew the adjustable foot (Pic-6)



**Picture-6**

7. Unscrew the bottom hinge screws. (Pic-7)



**Picture-7**

**Reversing the door**

**8.** Unscrew the bottom hinge pin and screw it to other hole. (Pic-8)

**9.** Screw the bottom hinge to the left bottom side of refrigerator. Screw the adjustable foot there. (Pic-9)



**Picture-8**



**Picture-9**

**10.** Unscrew the two screws fixing stopper and stopper support plate under the cooler door. After that screw the other side. (Pic-10)



**Picture-10**

**11.** Replace the top bushing and the top bushing cap at the bottom door. (Pic-11)



**Picture-11**

**12.** Remove the support plastic and then metal stopper placed under the upper door. (Picture-12.2) Then re screw these parts to the other side symmetrically. (remember the screw for the metal part must be screwed to the hole which is closer to the bushing). Do not use cordless screwdriver for these screws.



**Picture-12.1**



**Picture-12.2**

**13.** Remove the hinge cover on the top panel and replace to other side.(Pic-13)



**Picture-13**

**14.** Remove the middle hinge cover and then screw the screw on the side panel (Pic-14.1) and assemble to the right side panel (Pic-14.2)



**Picture-14.1**



**Picture-14.2**

**15.** Place the bottom door (Pic-15.1) and rotate the middle hinge by 180°. After that, Screw to the right side on the middle sheet. (Pic-15.2)



**Picture-15.1**



**Picture-15.2**

**16.** Place the top door to the middle hinge and screw the top hinge to the top panel. (Pic-16)



**Picture-16**

**17.** Place the top hinge cover. (Pic-17)



**Picture-17**

Replacament of Door Switch

Remove the door switch by pulling forward and disconnect switch connector.



Door switch  
Door open = switch closed  
Door closed = switch open



***Warning: Pay attention not to damage to the door switch body details!***



***The plug must be pulled out before the led lamp is removed.***

1. Press the snap fit cover with finger (Fic-1) and remove the box cover (Fic-2). After that operations, you can change the LED bulb.



**Figure-1**



**Figure-2**

2. For assembling, reverse the above operations..