

ERROR CODE	MEANINGS	REMARK
E1	Longer inlet time(If the water valve is continue working 4 minutes, the dishwasher will start E1 alarm)	
E3	Longer heating time(If the dishwasher heating over 60 minutes and not reaching required temperature, the dishwasher will start E3 alarm)	Only for test program
E4	Overflow(If the overflow switch acts, the dishwasher will start E4 alarm)	
E6	Open-circuit failure of NTC	
E7	Short-circuit failure of NTC	
E8	Diverter valve fault	For models equipped with diverter