



- ELECTRIC DIAGRAM KEY**
- F1 Oven switch
 - TE Oven thermostat
 - LF Oven lamp
 - PR Oven programmer
 - S1 Line pilot lamp
 - S2 Thermostat pilot lamp
 - TL Thermal overload
 - M Terminal block
 - C Top element
 - G Grill element
 - S Bottom element
 - CF Cooling fan
 - V Fan
 - T Earth connection

1131277