


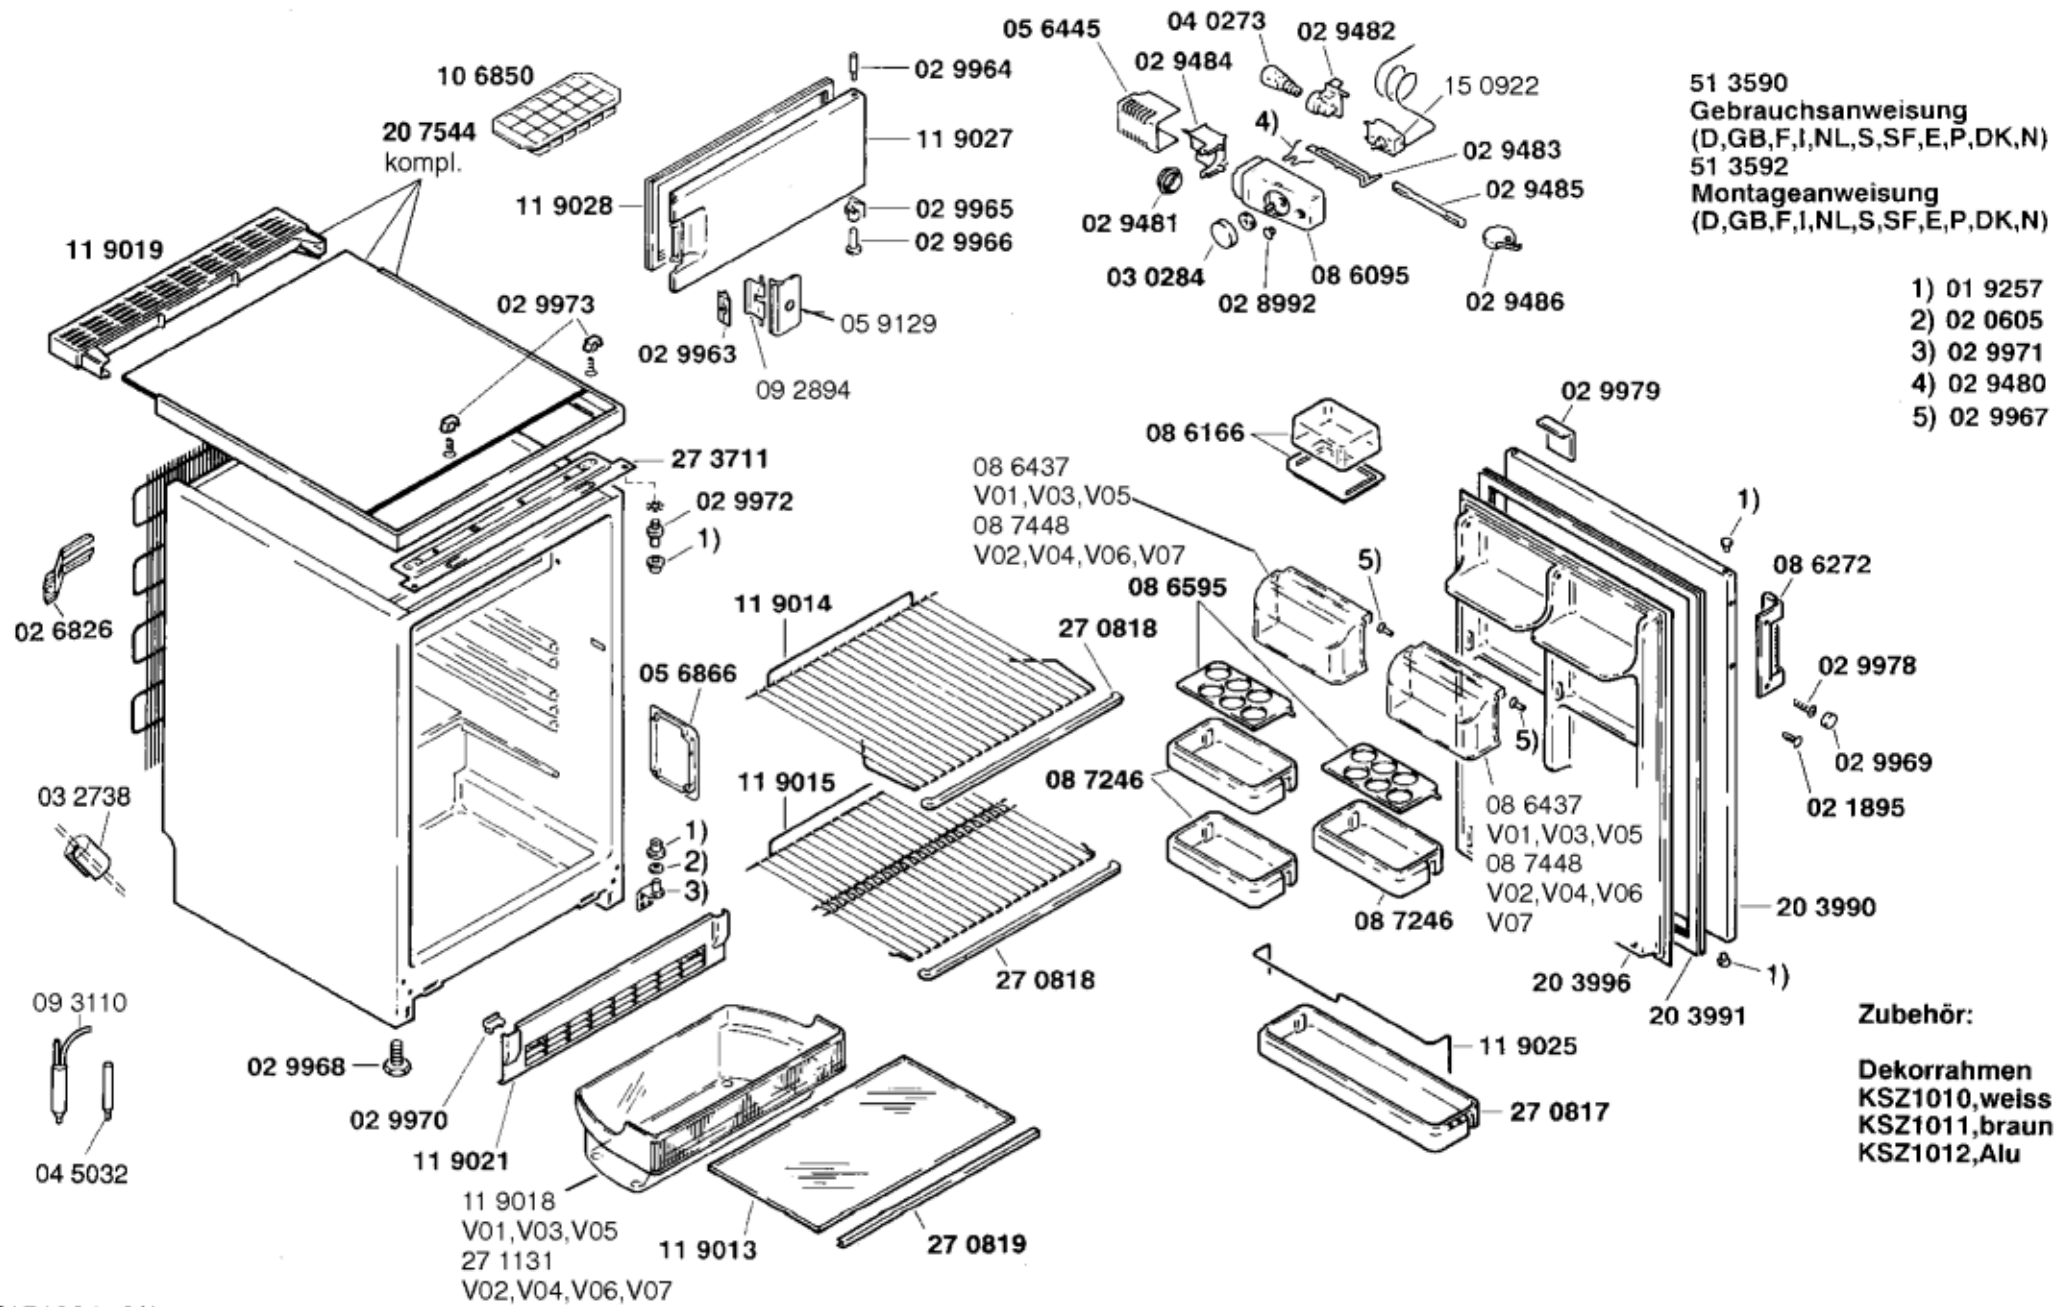

51 3590
Gebrauchsanweisung
(D,GB,F,I,NL,S,SF,E,P,DK,N)
51 3592
Montageanweisung
(D,GB,F,I,NL,S,SF,E,P,DK,N)

- 1) 01 9257
- 2) 02 0605
- 3) 02 9971
- 4) 02 9480
- 5) 02 9967

Zubehör:

Dekorrahmen
KSZ1010, weiss
KSZ1011, braun
KSZ1012, Alu

