

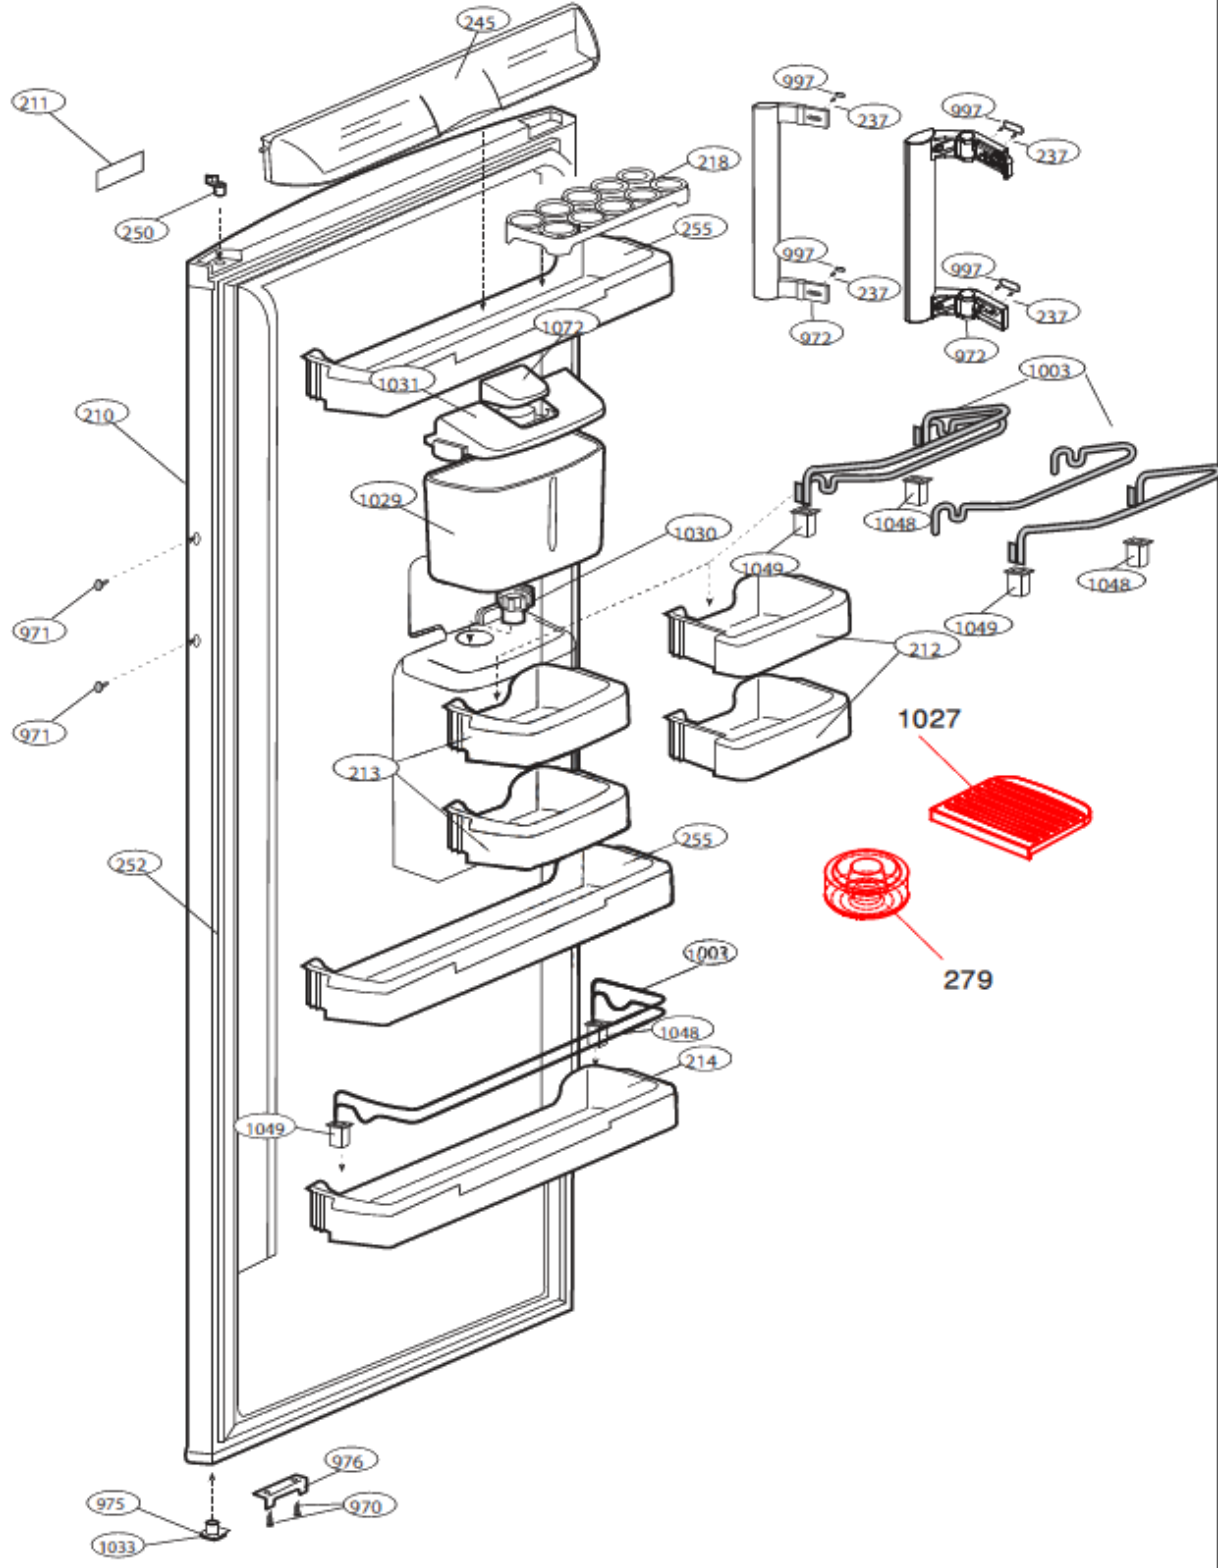
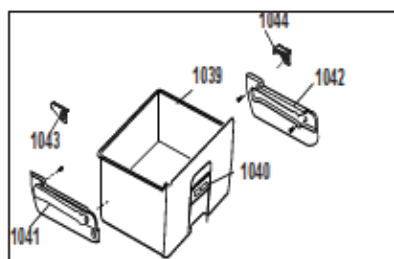
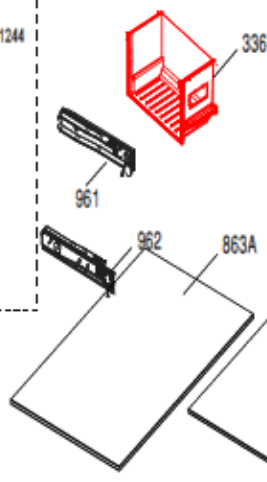
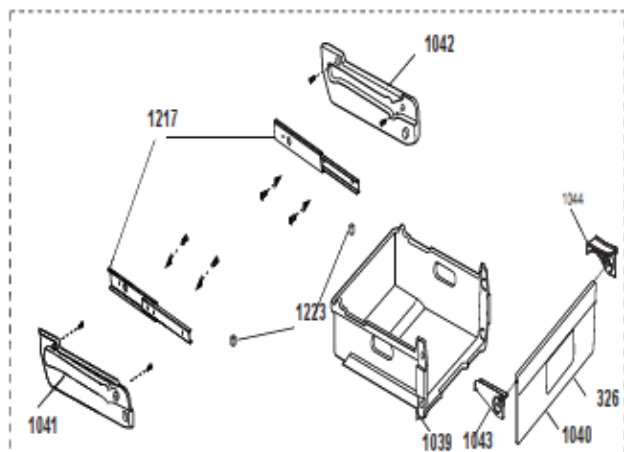


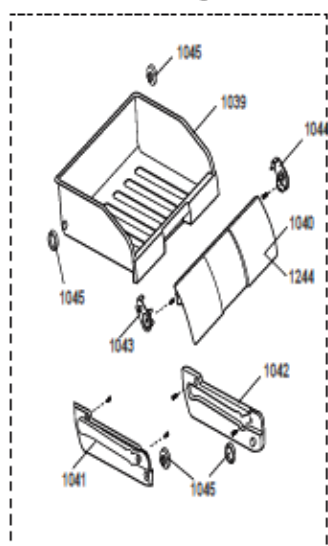

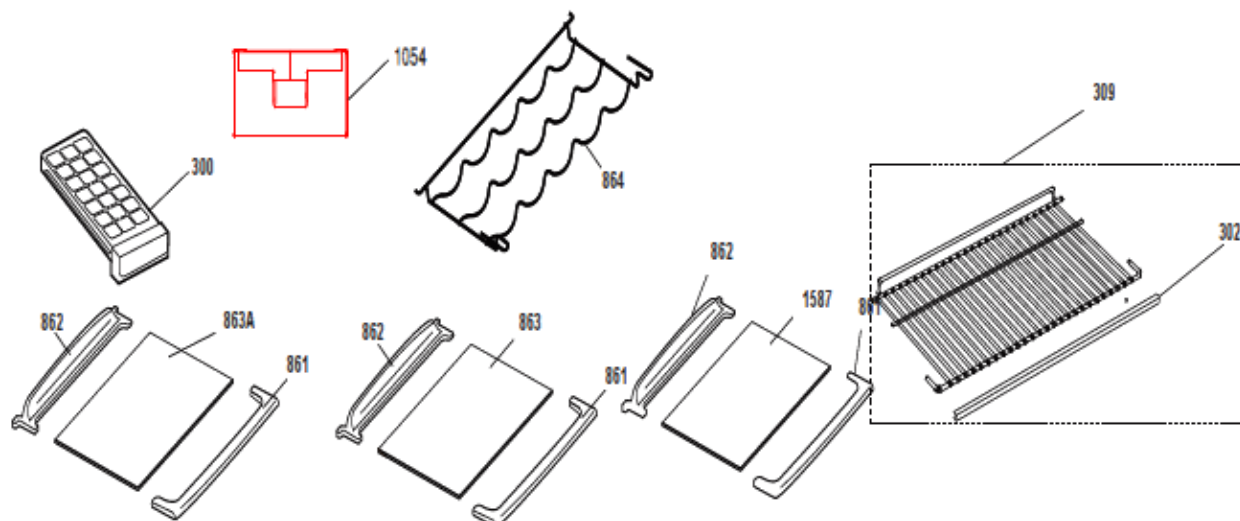

1021/17: Turn the bin handle to the outside to open the bin. To close the bin, turn the handle to the inside. Turn the bin handle to the outside to open the bin. To close the bin, turn the handle to the inside.

1022/17: Turn the bin handle to the outside to open the bin. To close the bin, turn the handle to the inside. Turn the bin handle to the outside to open the bin. To close the bin, turn the handle to the inside.

1023/17: Turn the bin handle to the outside to open the bin. To close the bin, turn the handle to the inside. Turn the bin handle to the outside to open the bin. To close the bin, turn the handle to the inside.

