


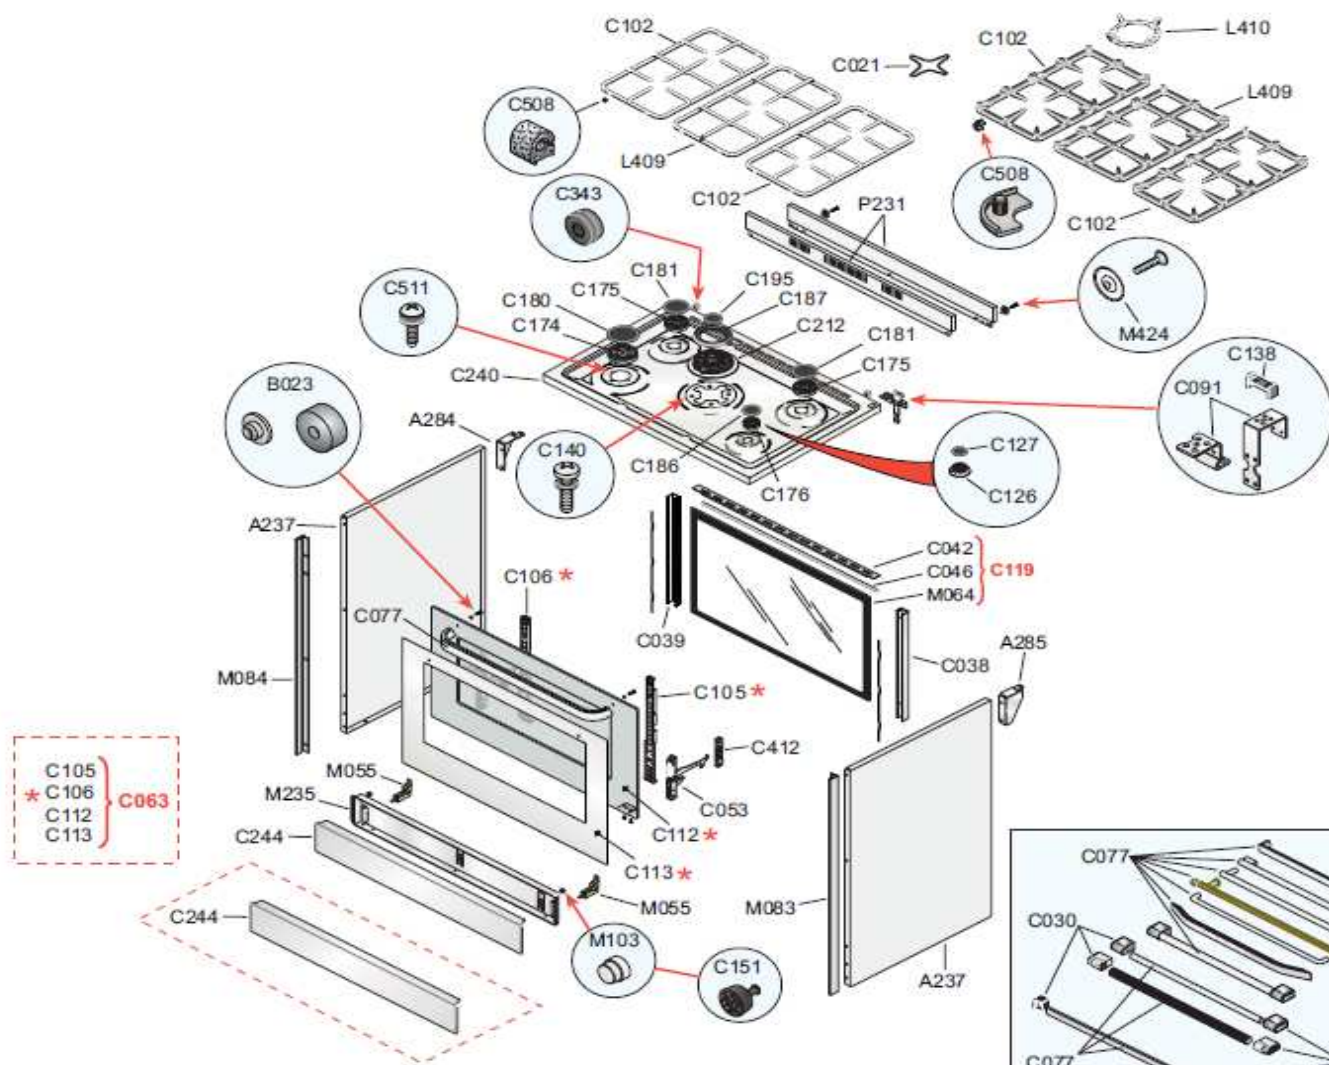


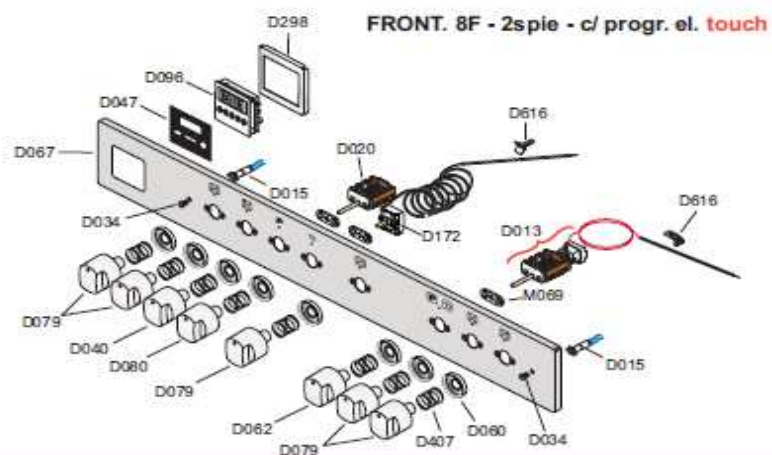

FRONT. 8F - 3spie - c/ progr. el. touch (piano VTC)

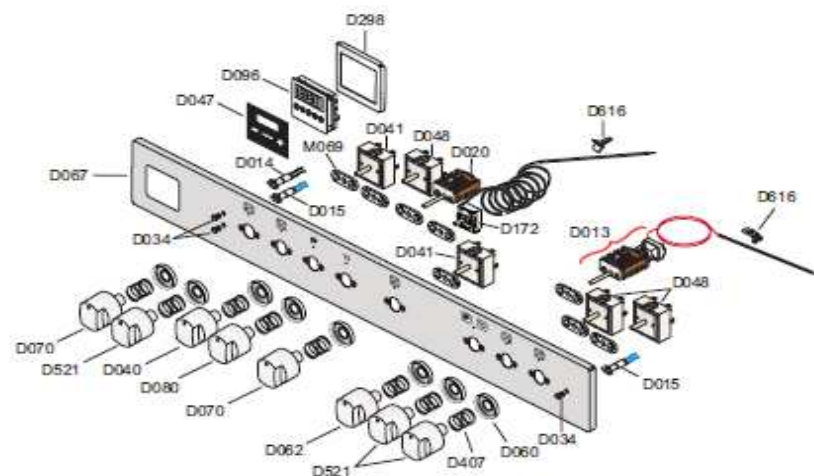

FRONT. 7F - 2spie - c/ progr. el. 6 tasti

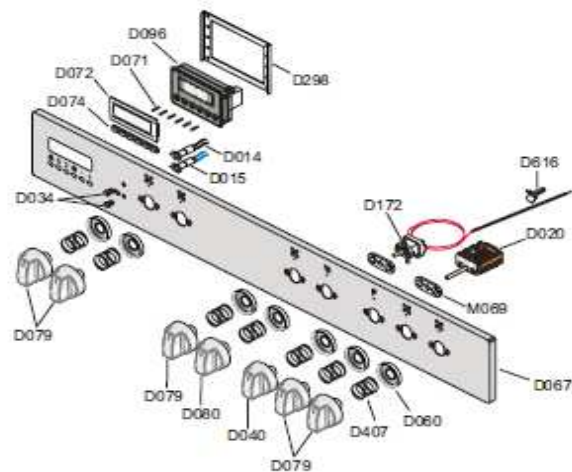

FRONT. 8F - 2spie - c/ progr. el. 6 tasti

