


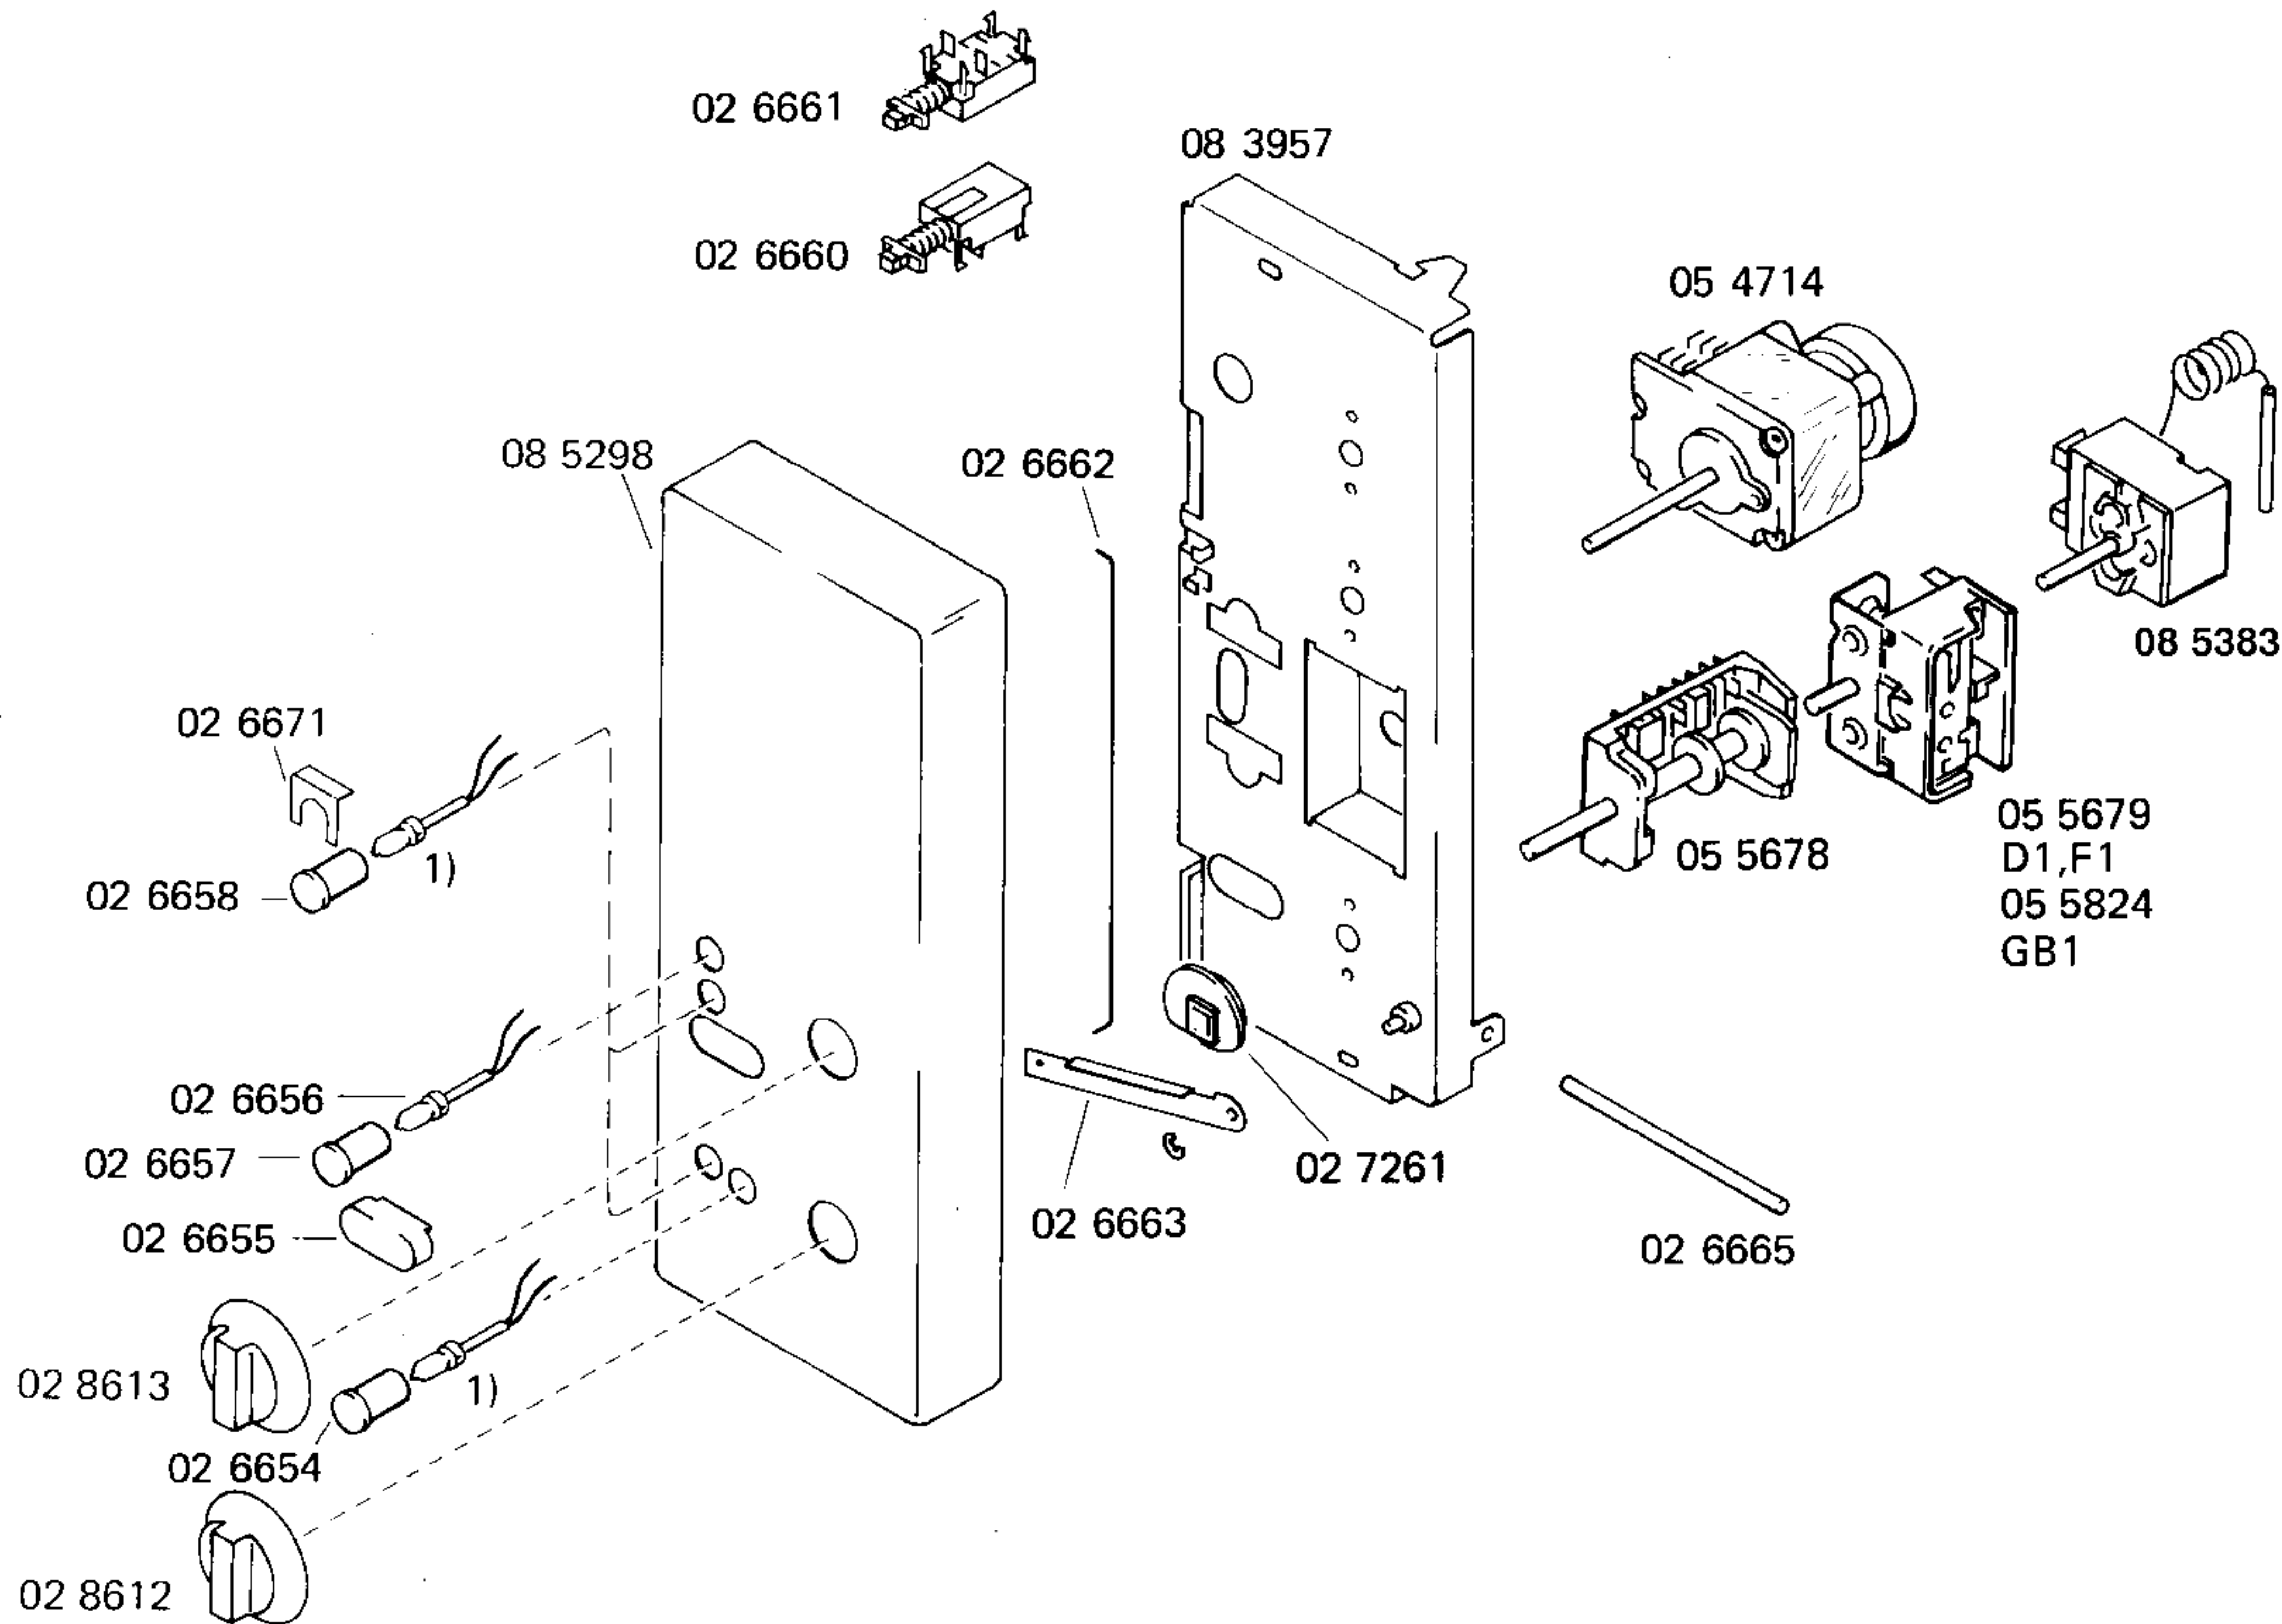

Gebrauchsanweisung

51 2892

(D,GB,F,I,NL)

Kochbücher

51 2883

D1

(D)

51 2894

F1

(F)

51 2893

GB1

(GB)

MW-Kochbücher

51 2895


F1

(F)

51 2963

GB1

(GB)

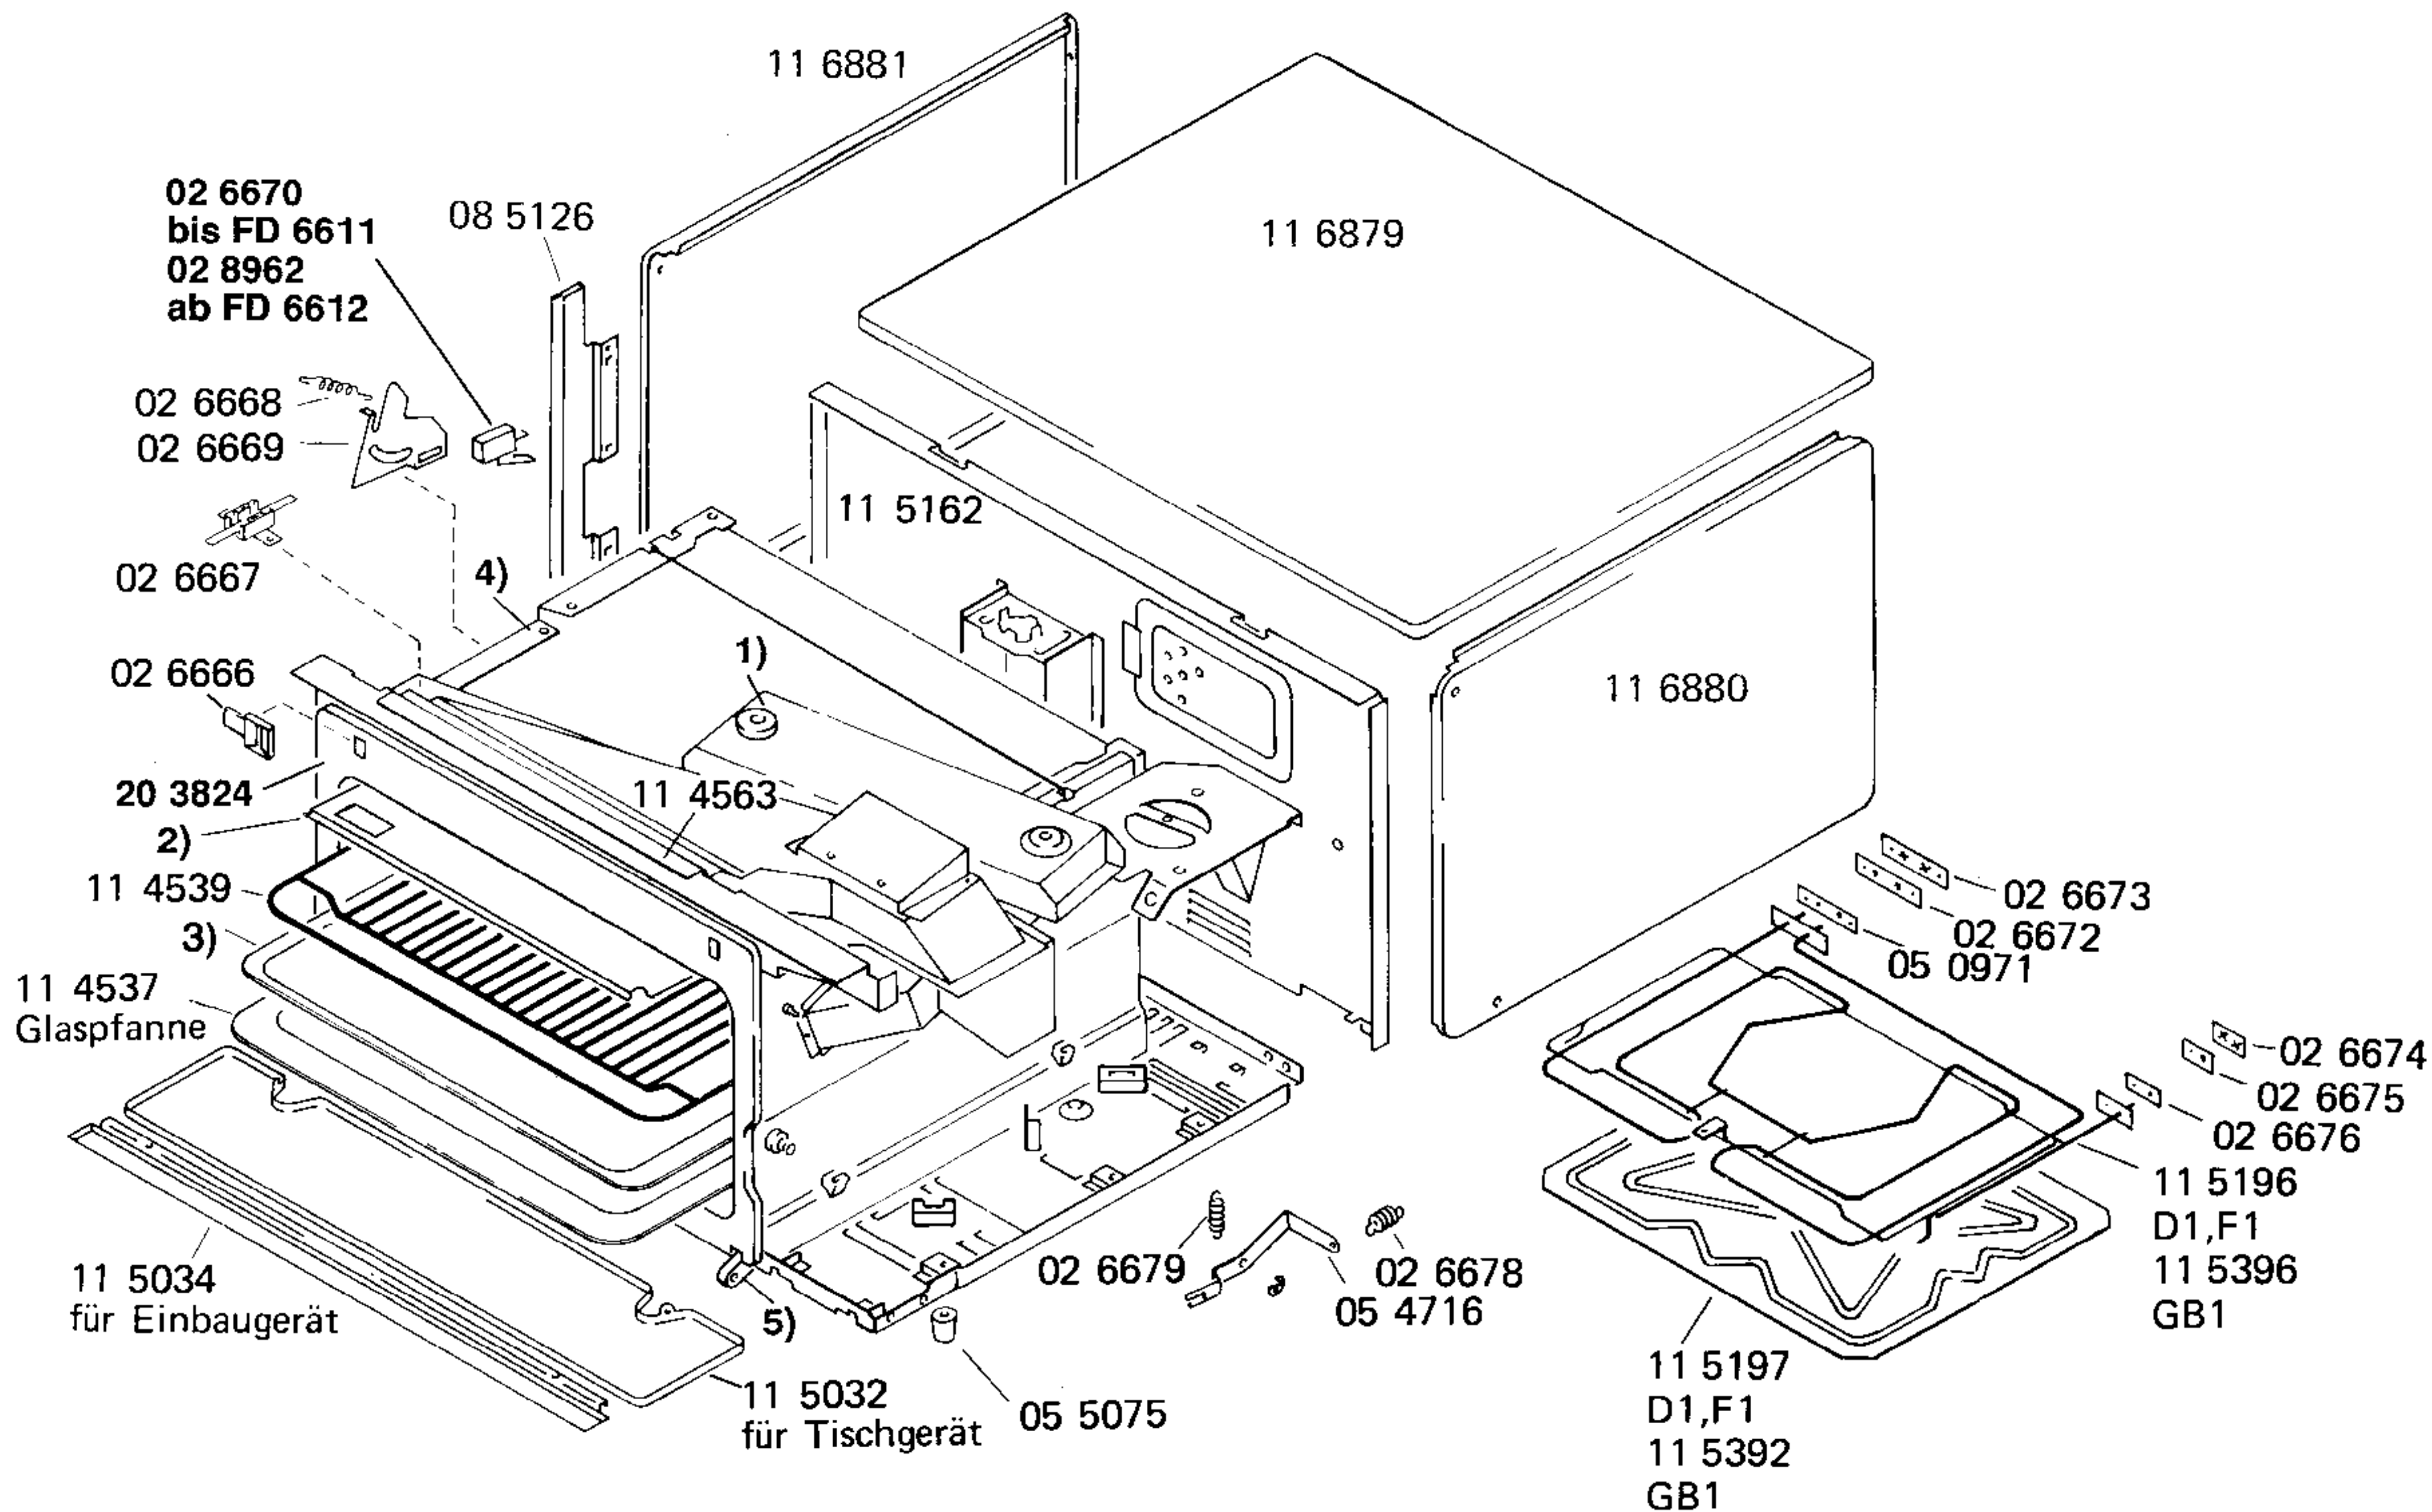

1) 11 6665

2) 11 6684

3) 11 4538
Backblech
02 8732
Anschlagteil

4) Seitenblech
kompl.
27 0006
links
27 2084
rechts

5) 03 1615
rechts
03 1616
links

