






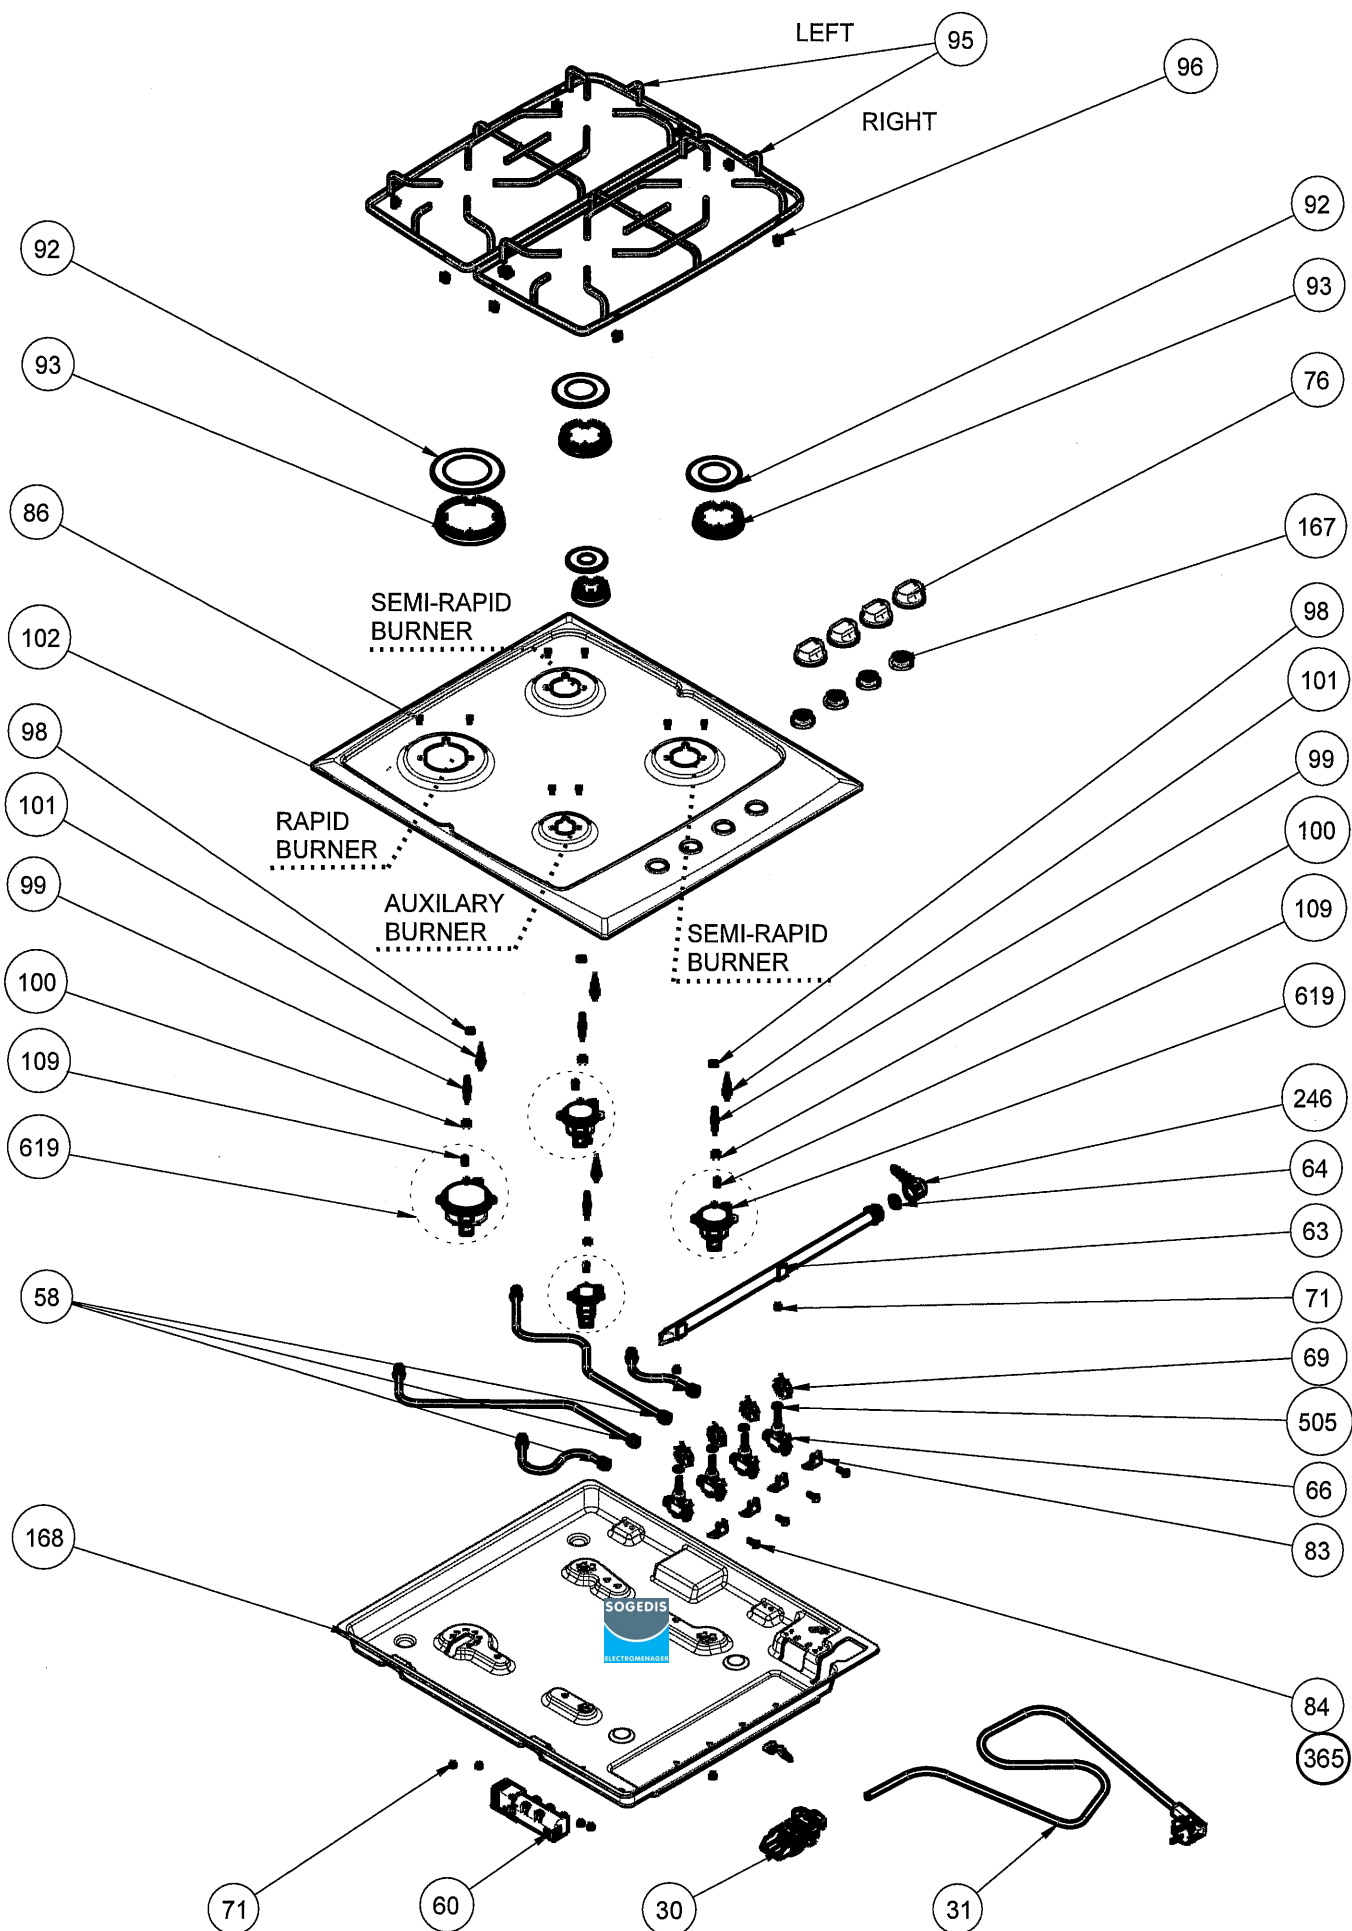

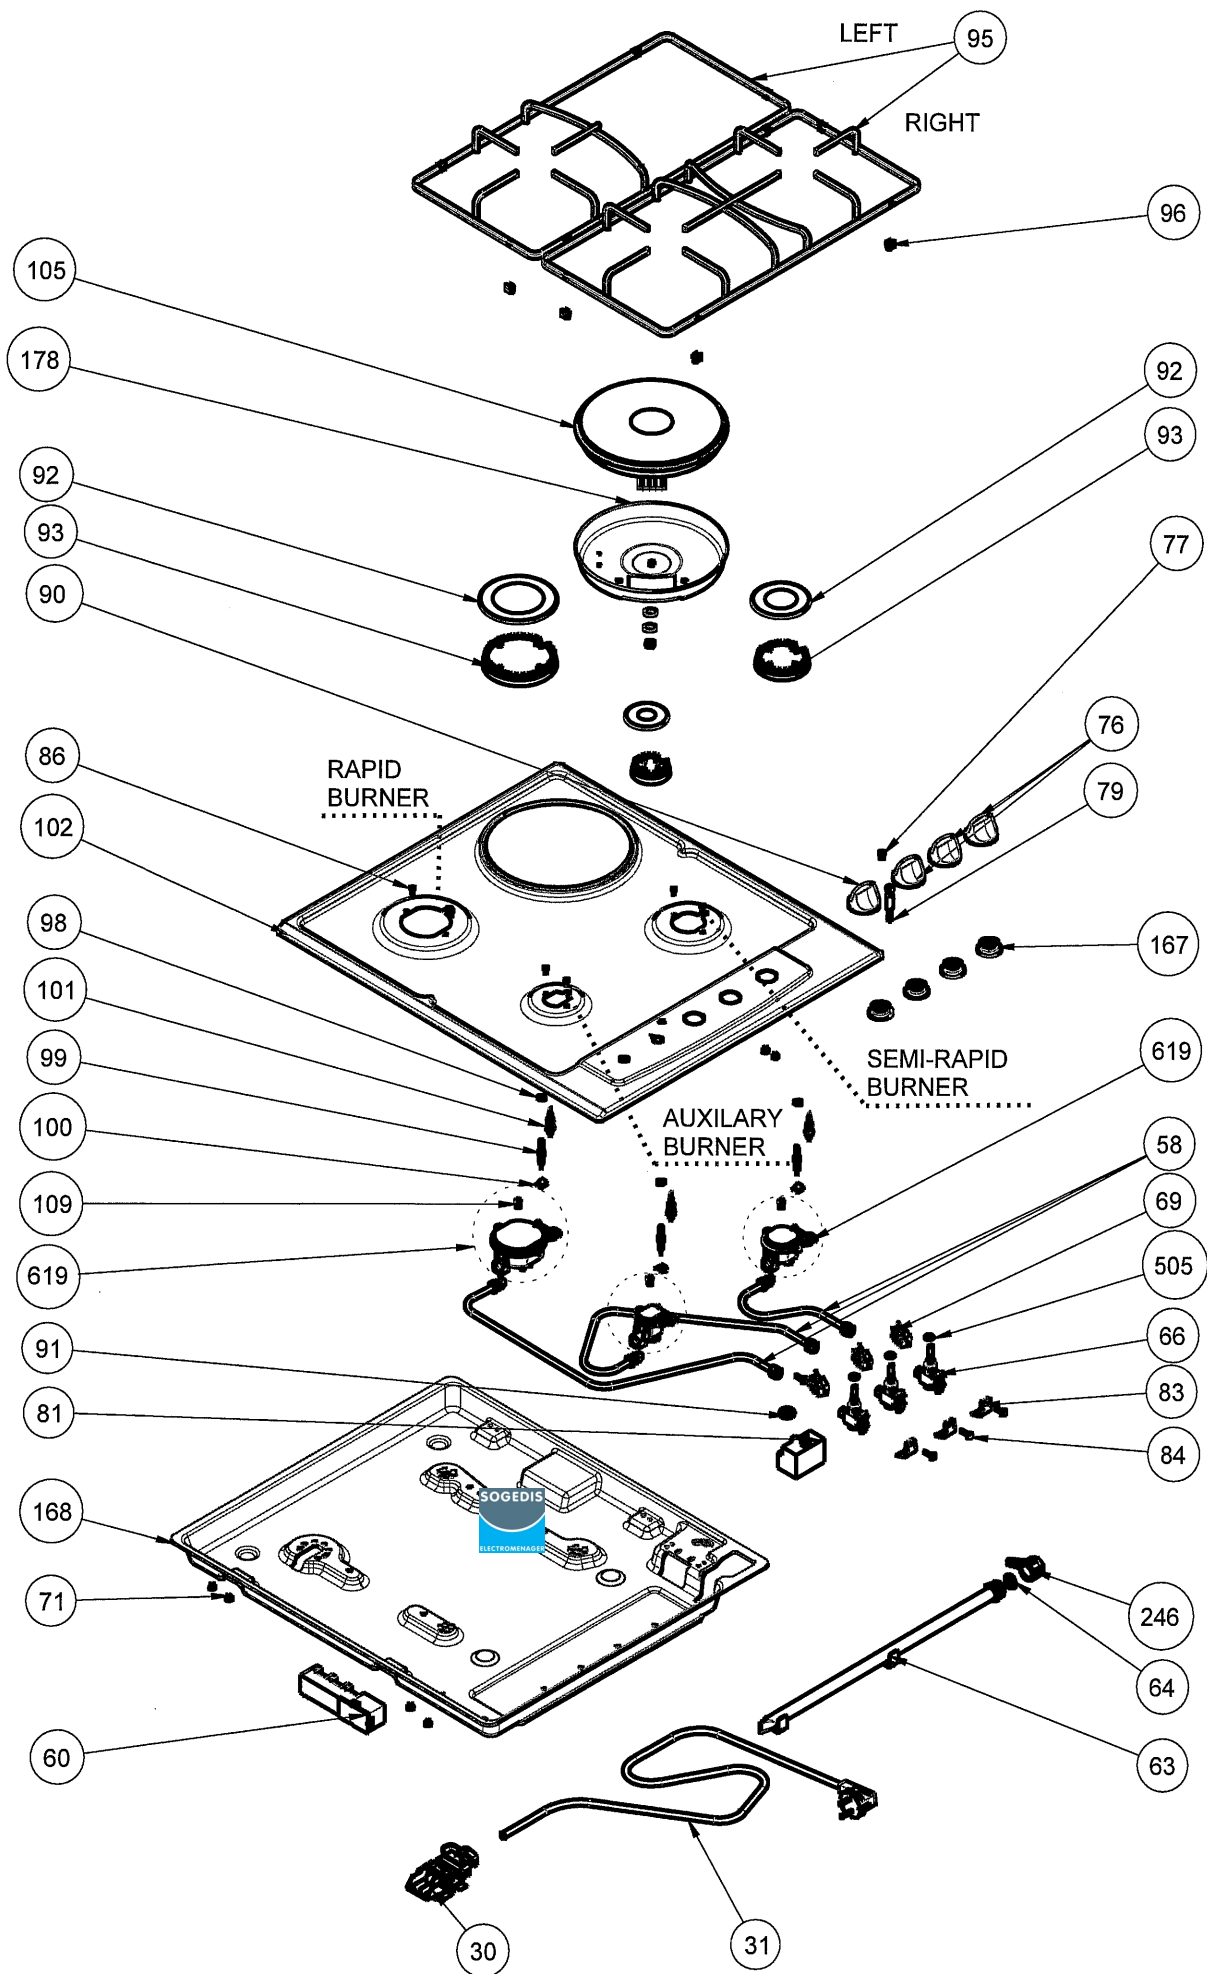


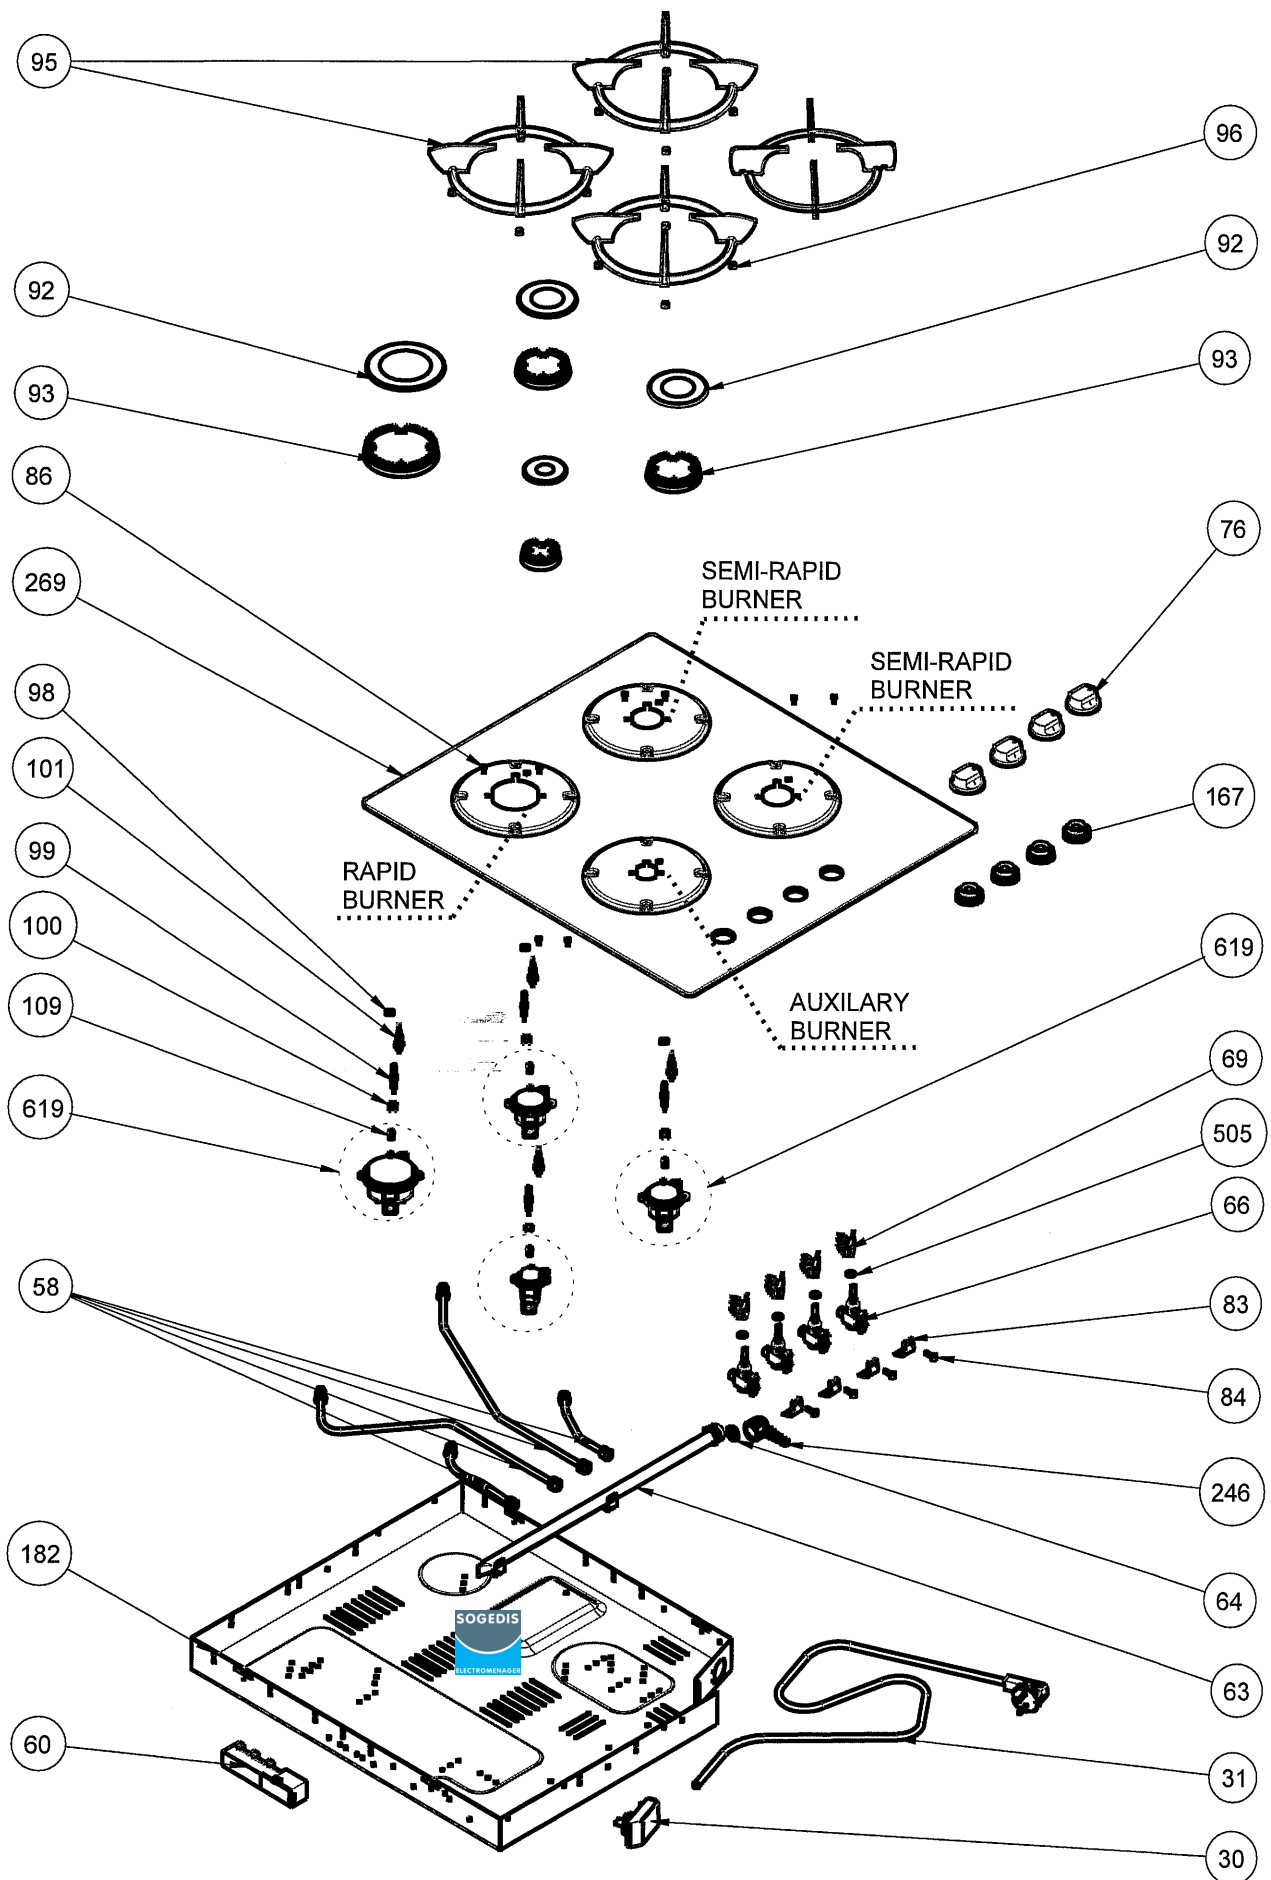

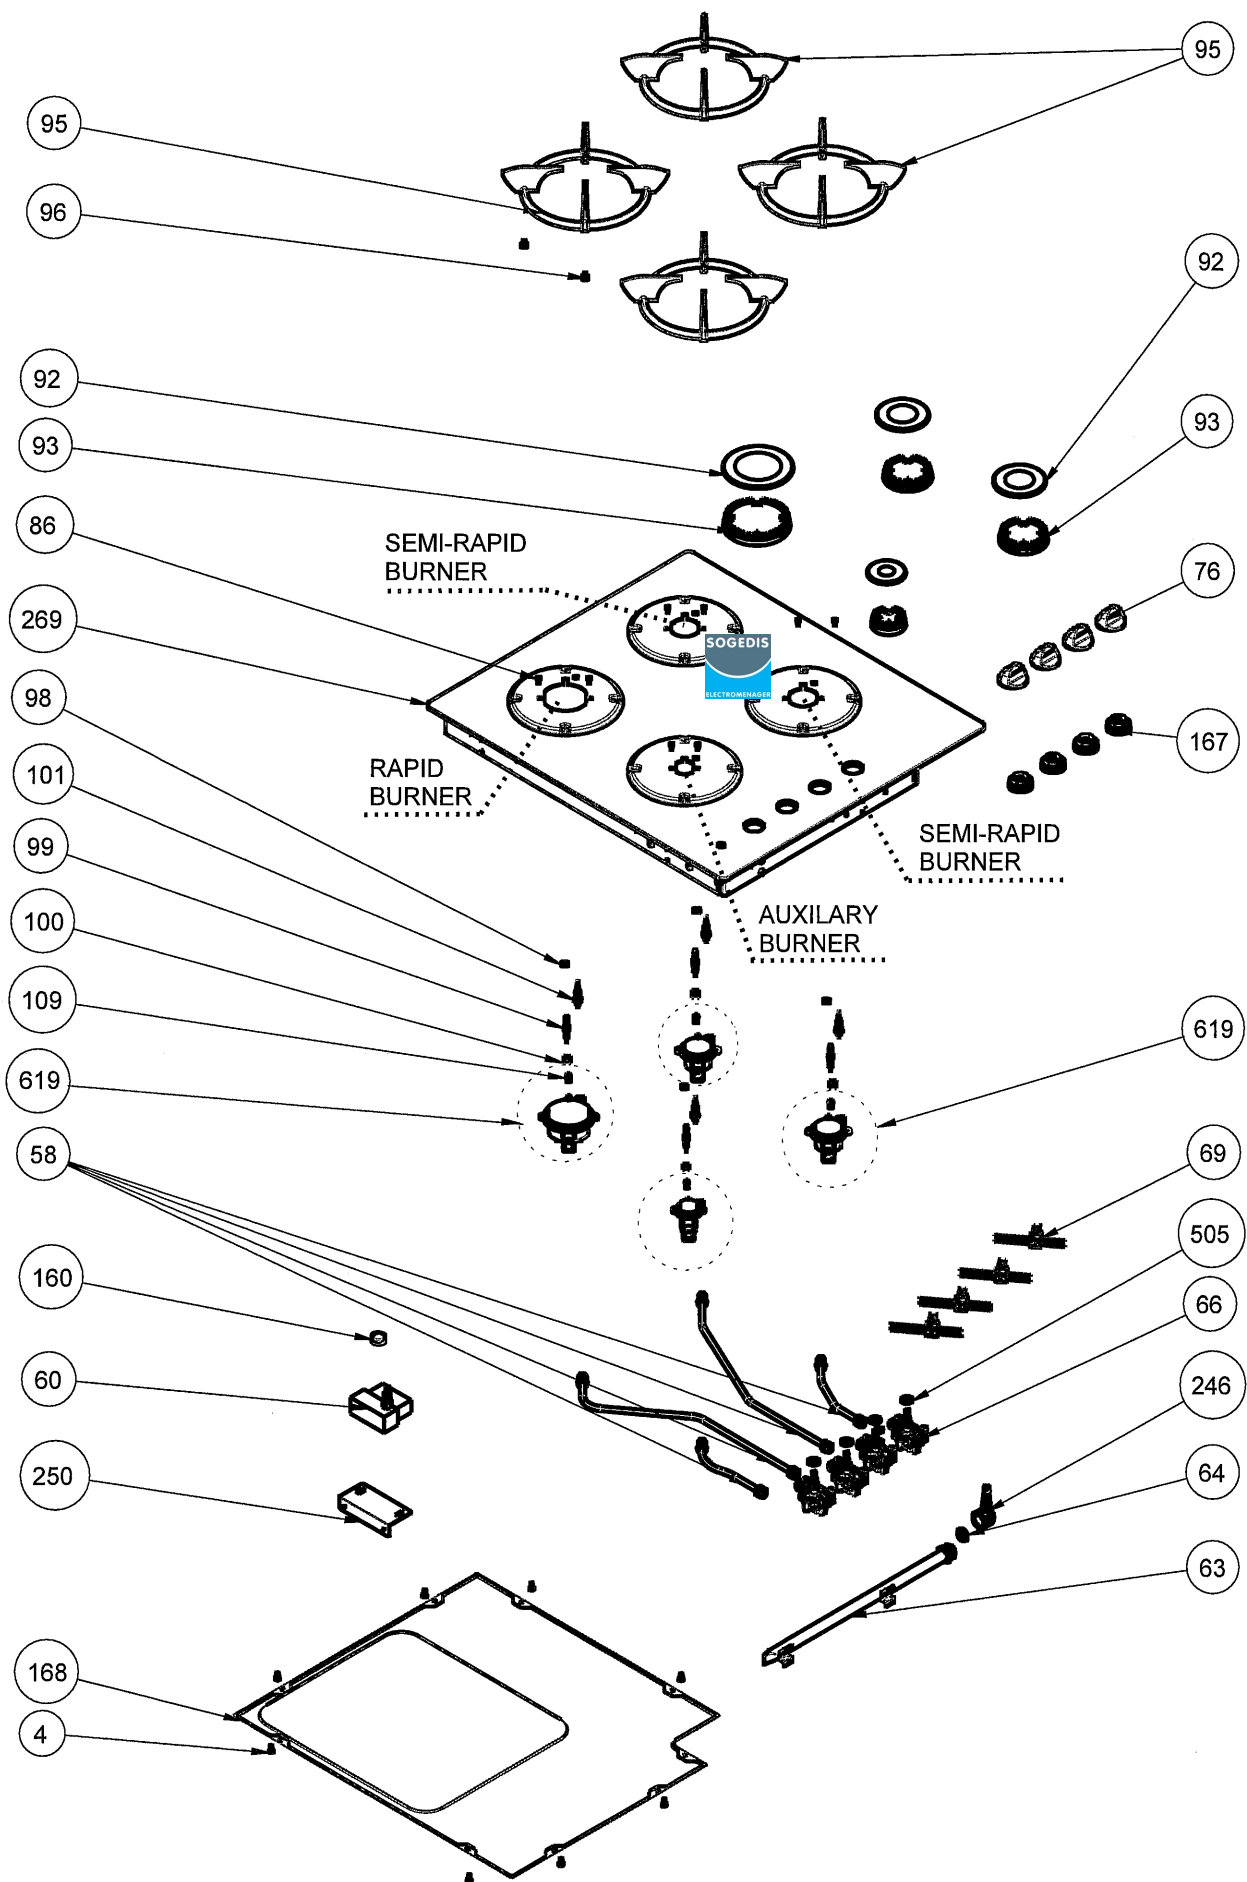


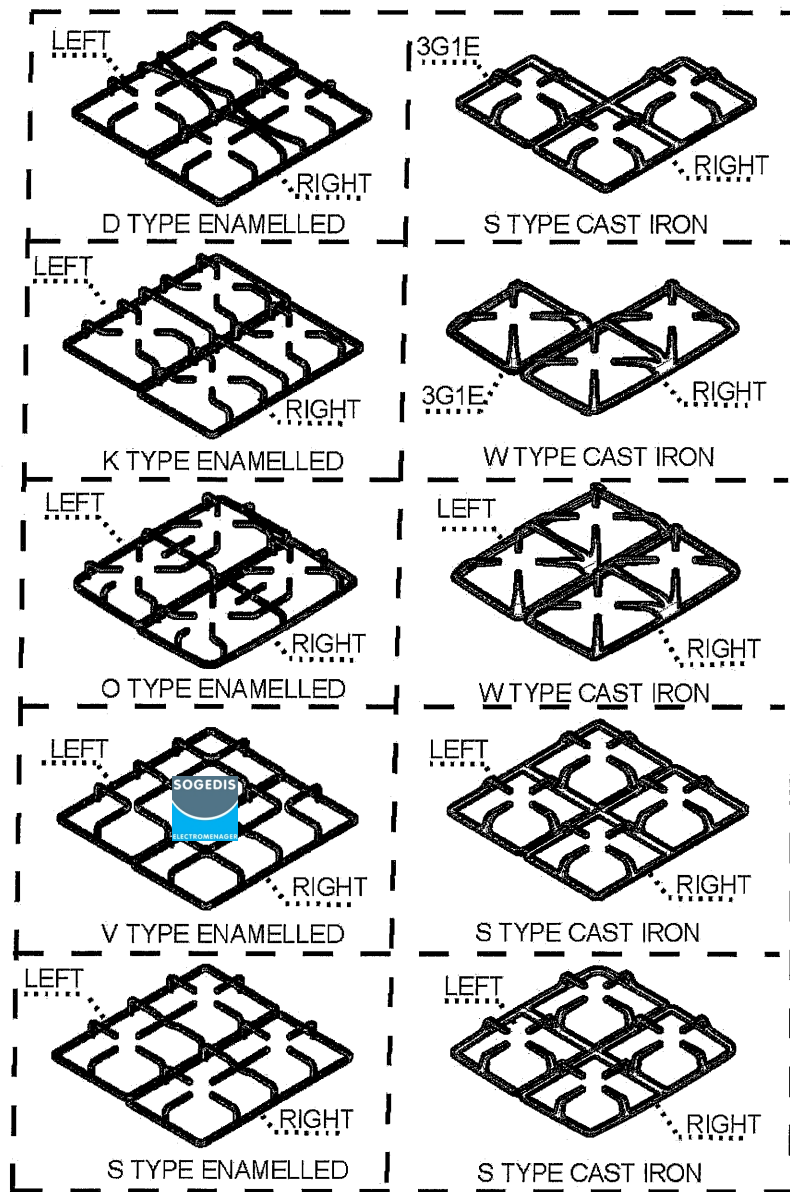


PAN SUPPORTS (OPTIONAL)

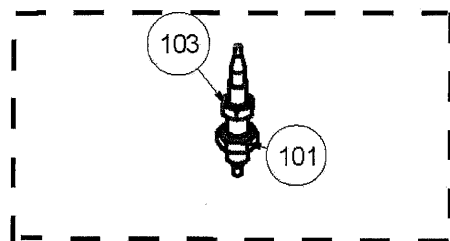


THERMOCOUPLE
(OPTIONAL)

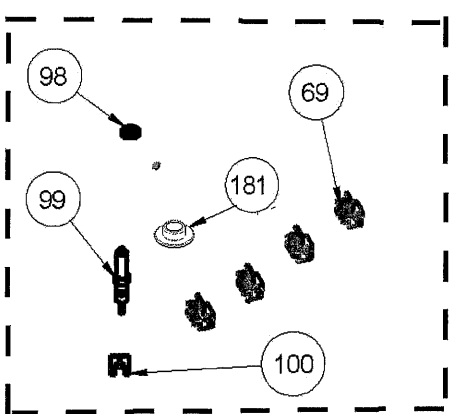


MICRO SWITCH (OPTIONAL)

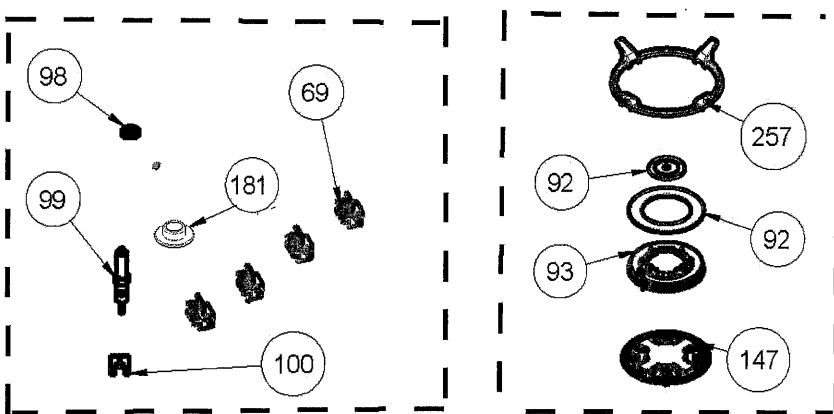


WOK BURNER
(OPTIONAL)

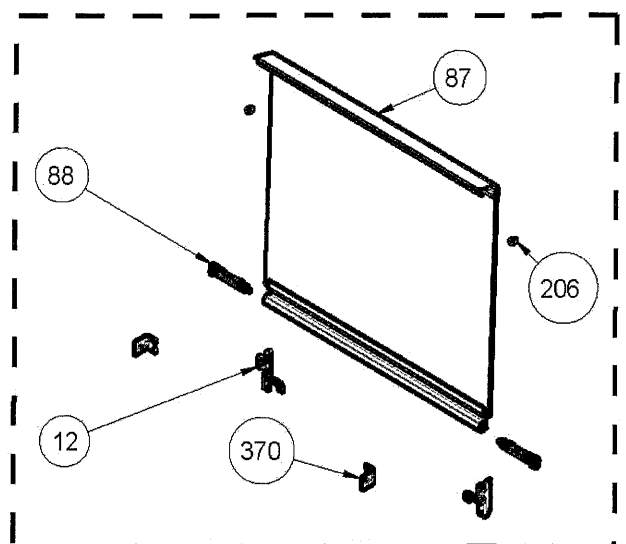


GLASS LID OPTIONAL
(AVAILABLE ONLY FOR FRAMED HOBS)

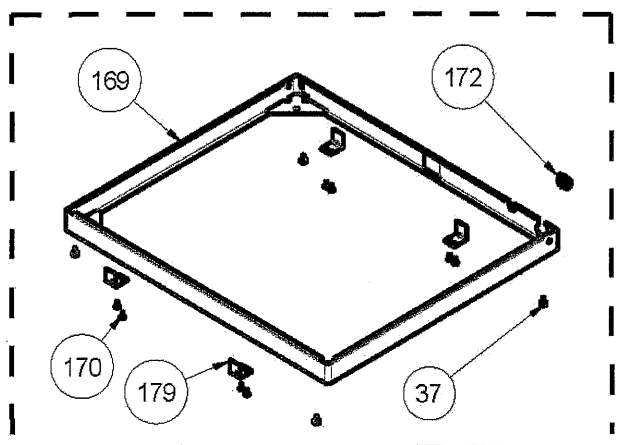

COOKTOP FRAME
(ONLY FOR TABLE-TOP HOBS)

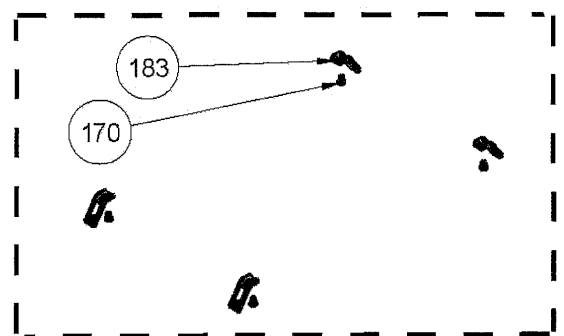

ASSEMBLY BRACKET
(ONLY FOR BUILT-IN HOBS)

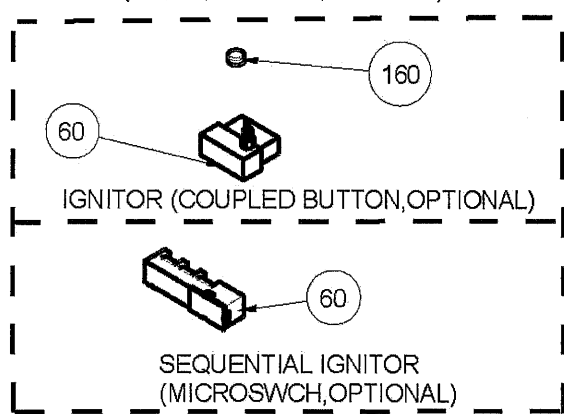

IGNITOR (COUPLED BUTTON, OPTIONAL)

SEQUENTIAL IGNITOR
(MICROSWCH, OPTIONAL)

GAS HOBS IGNITION SYSTEMS