




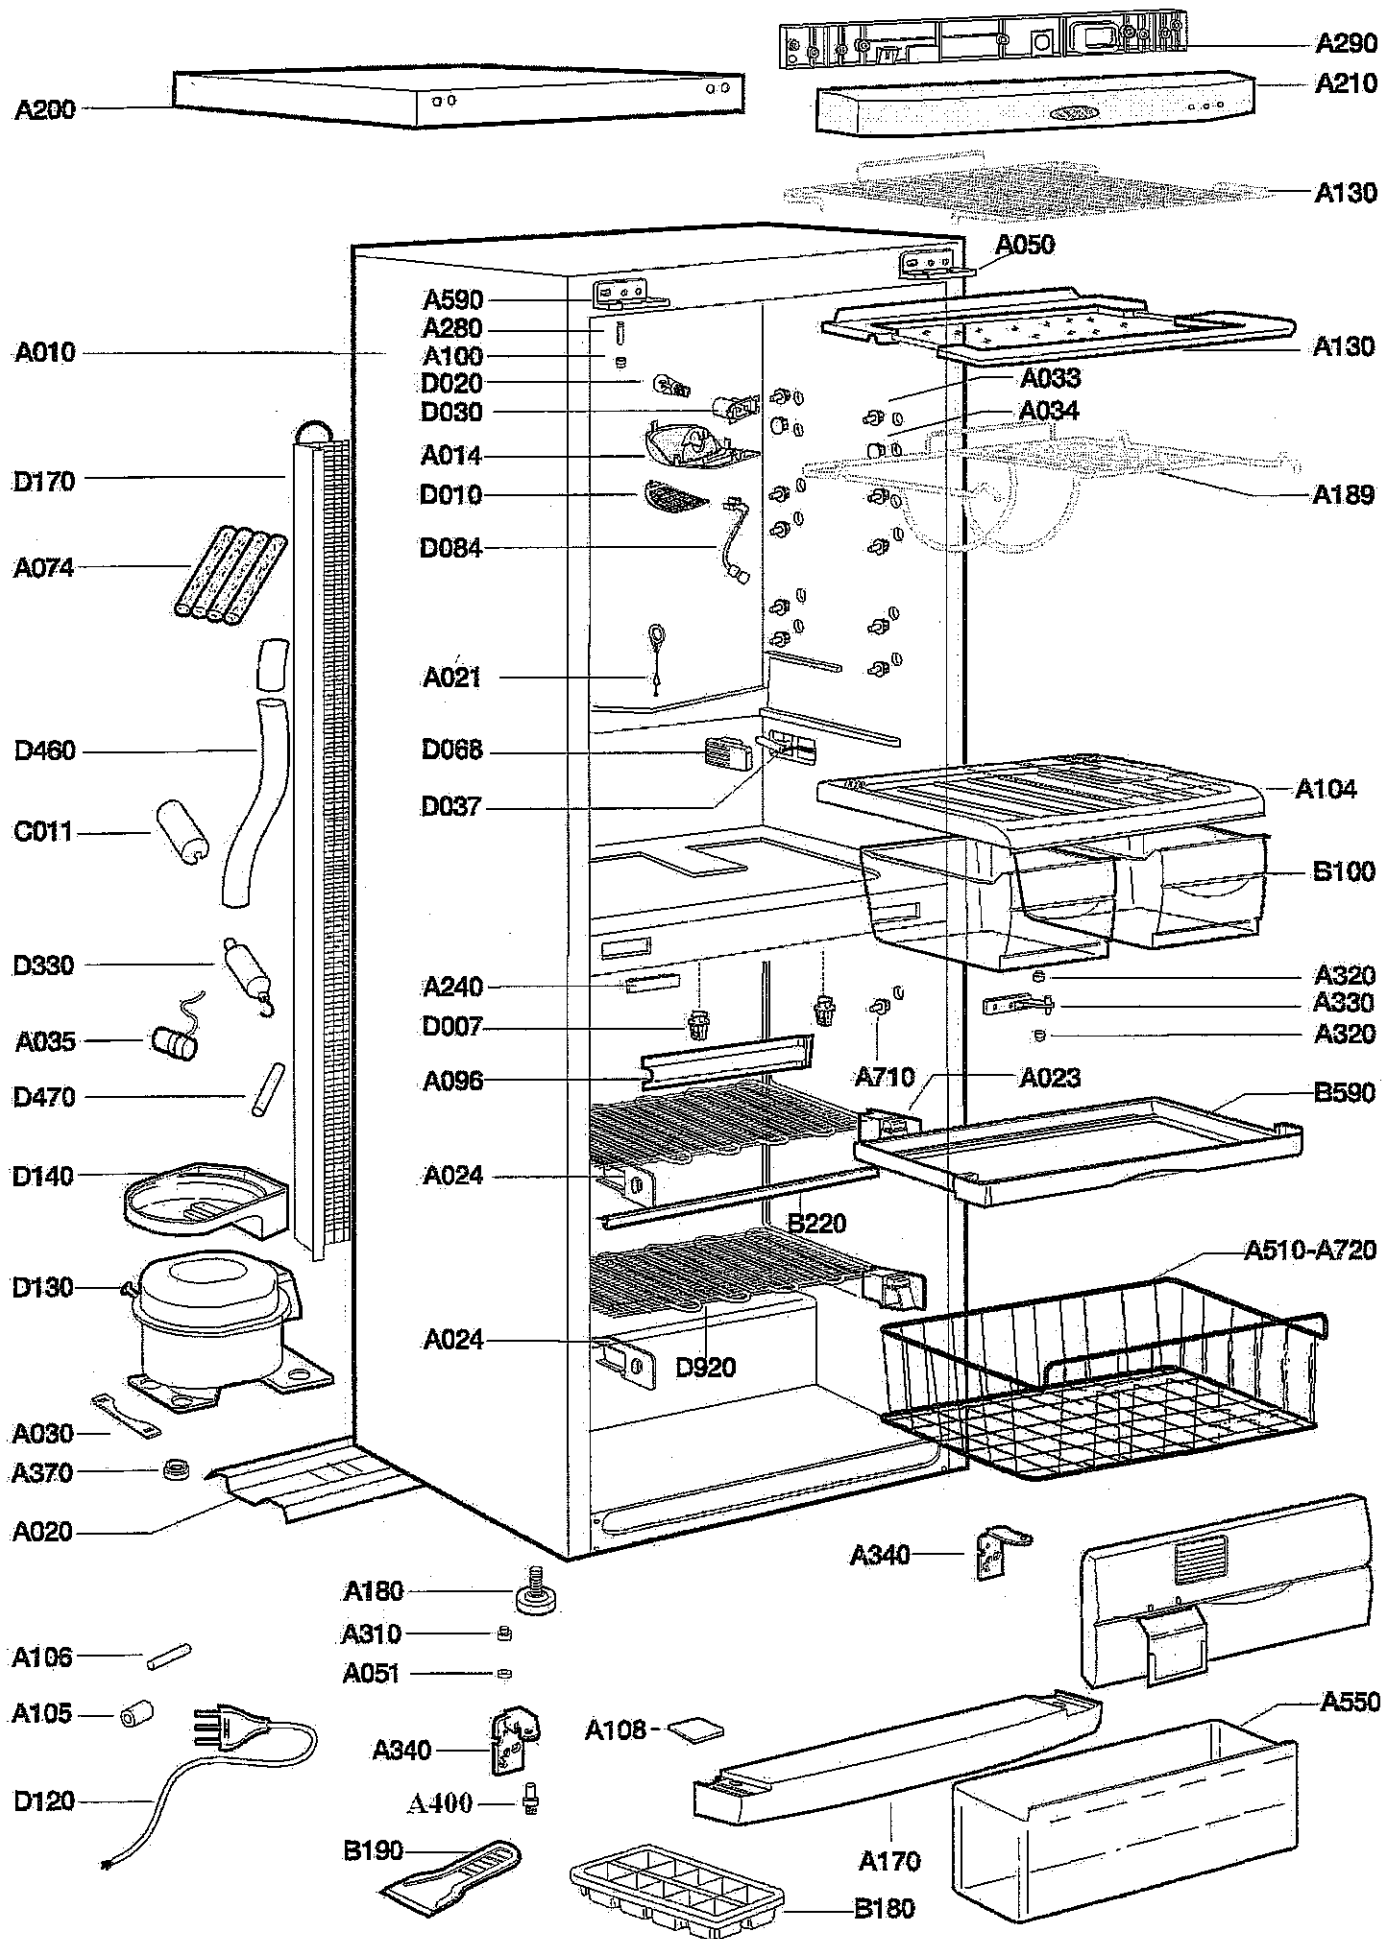


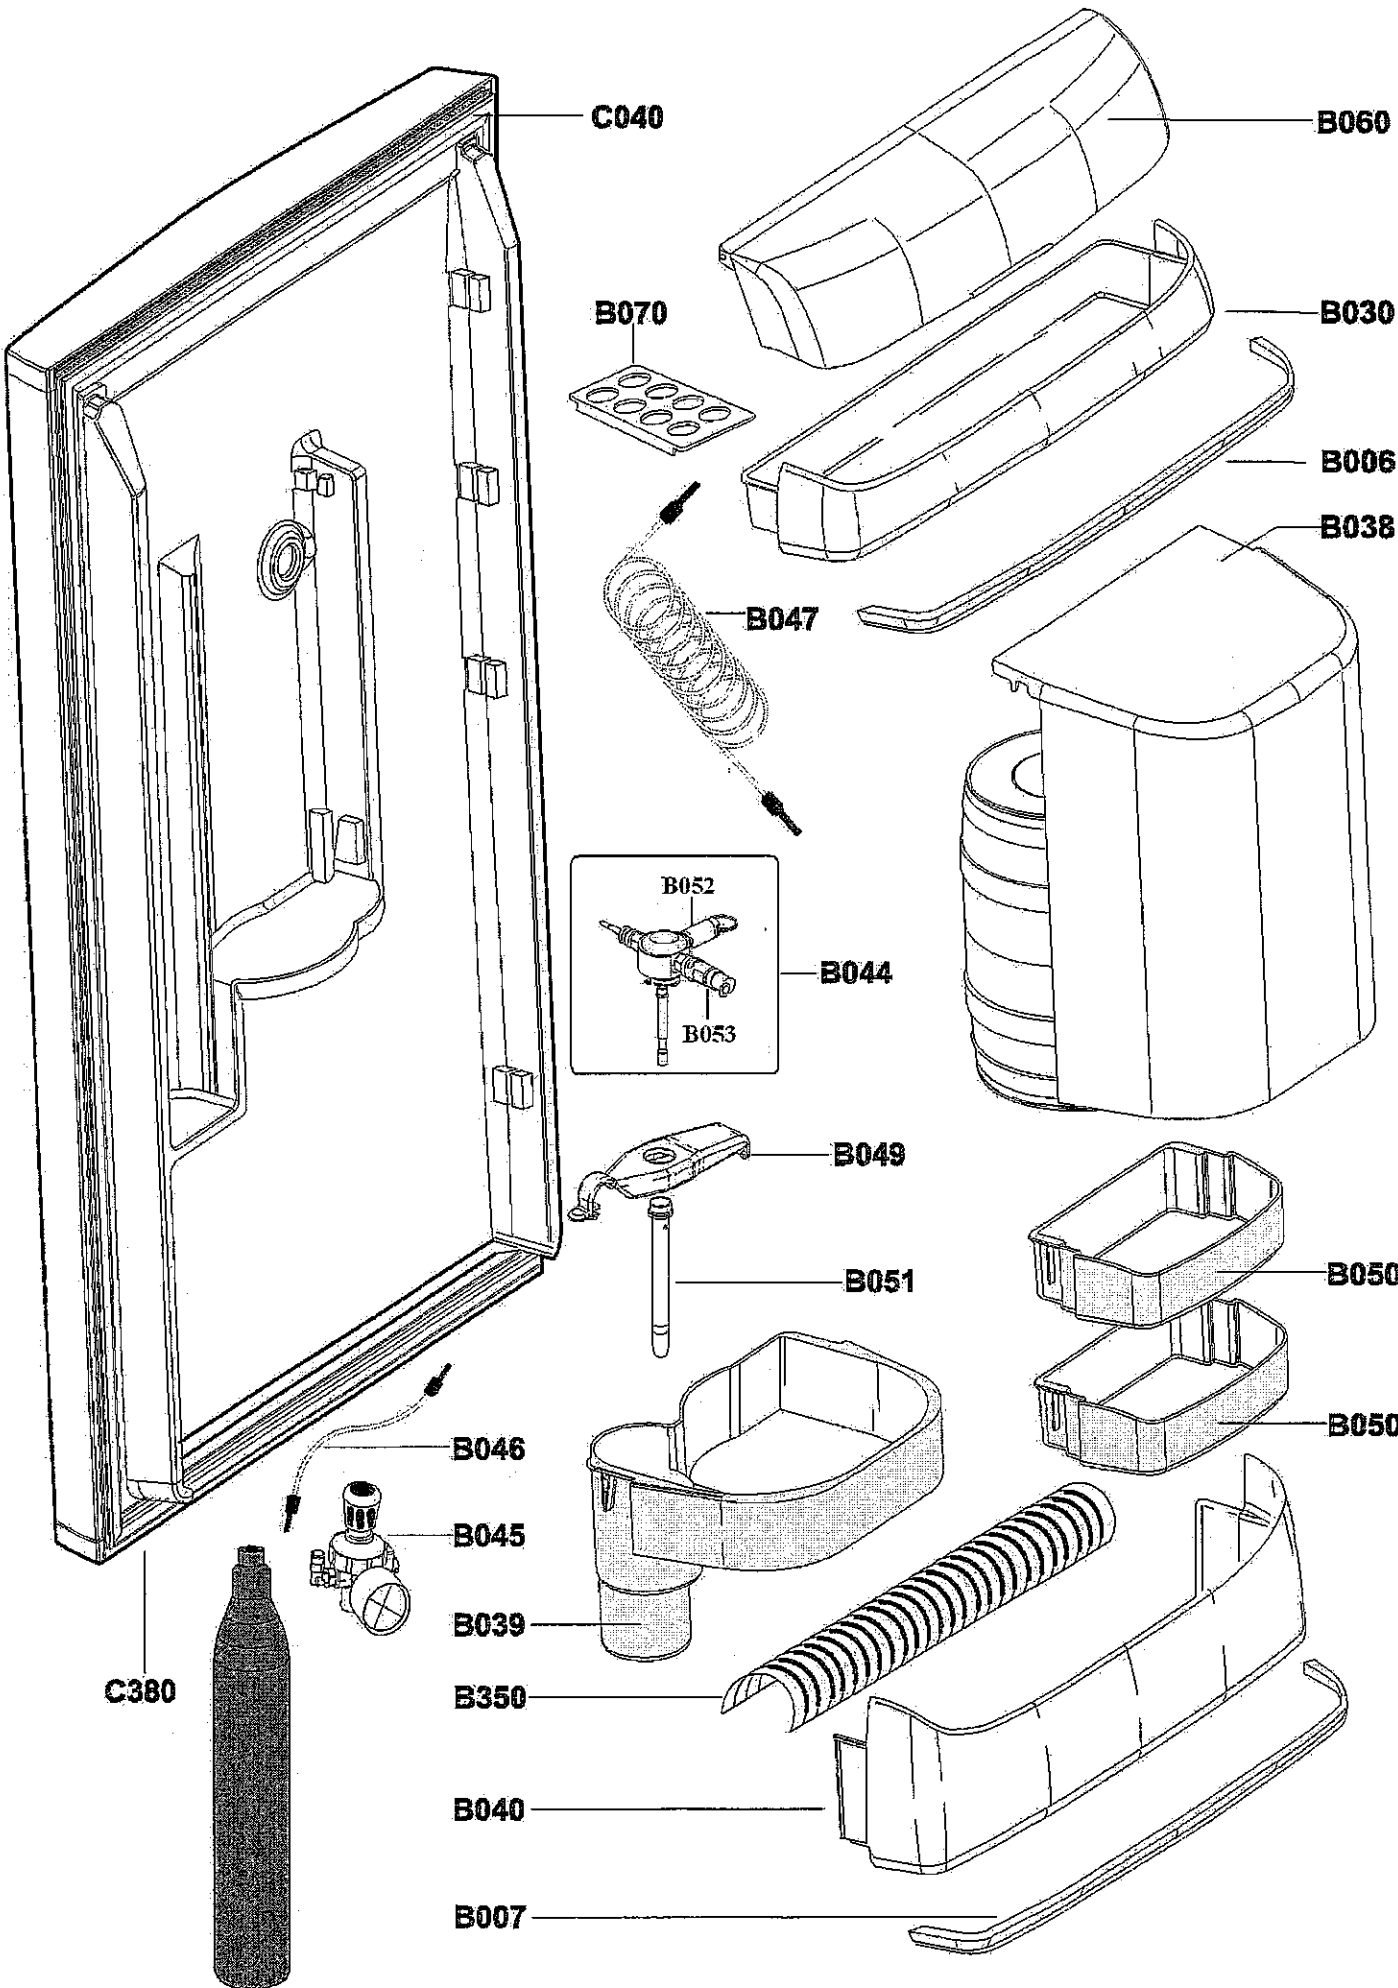


B043

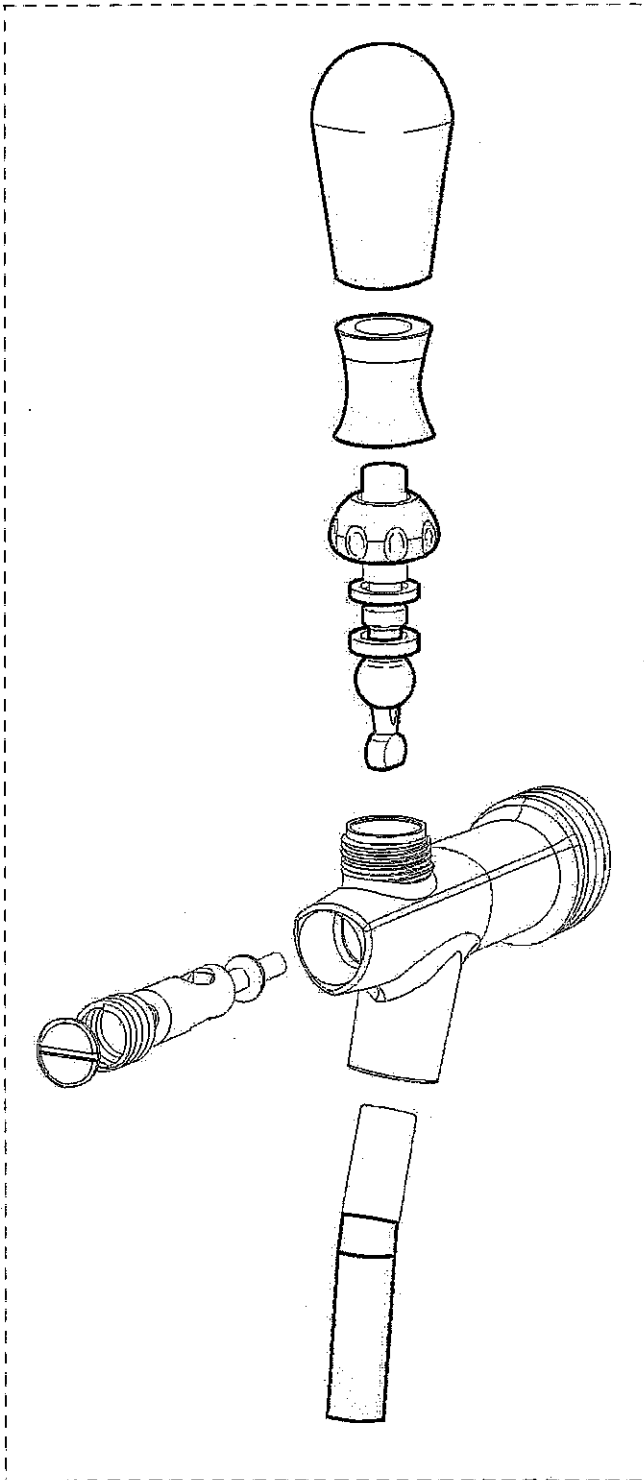


B043

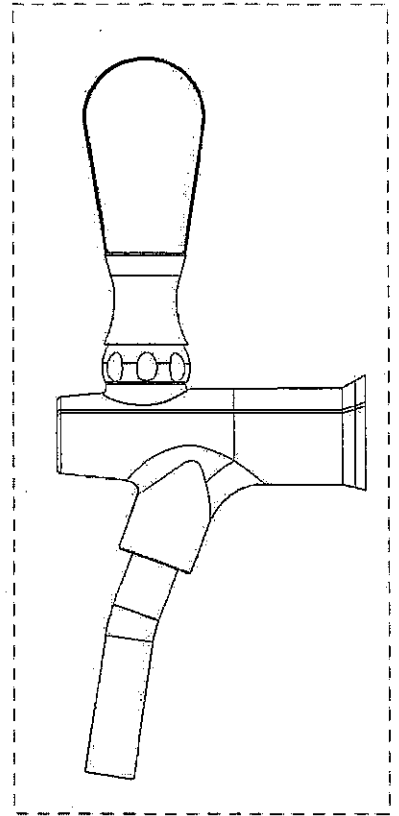


B067

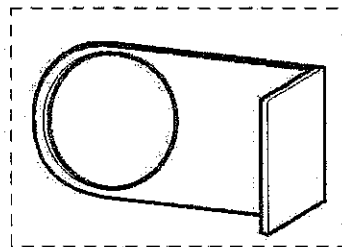


B069

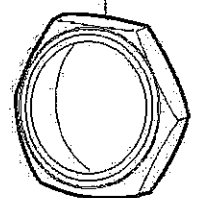


B068

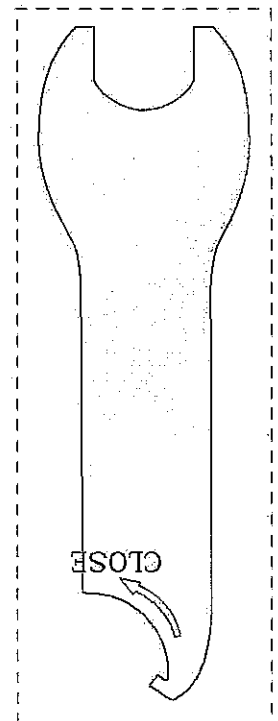


B048

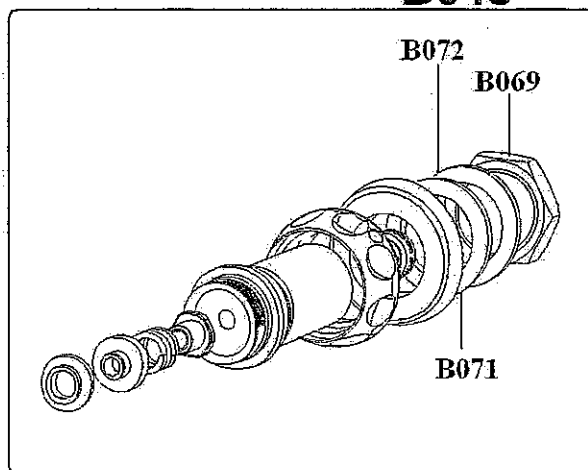

Profil **B048**

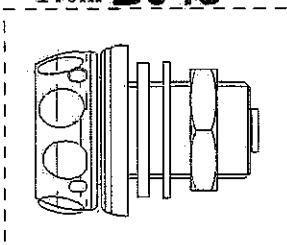

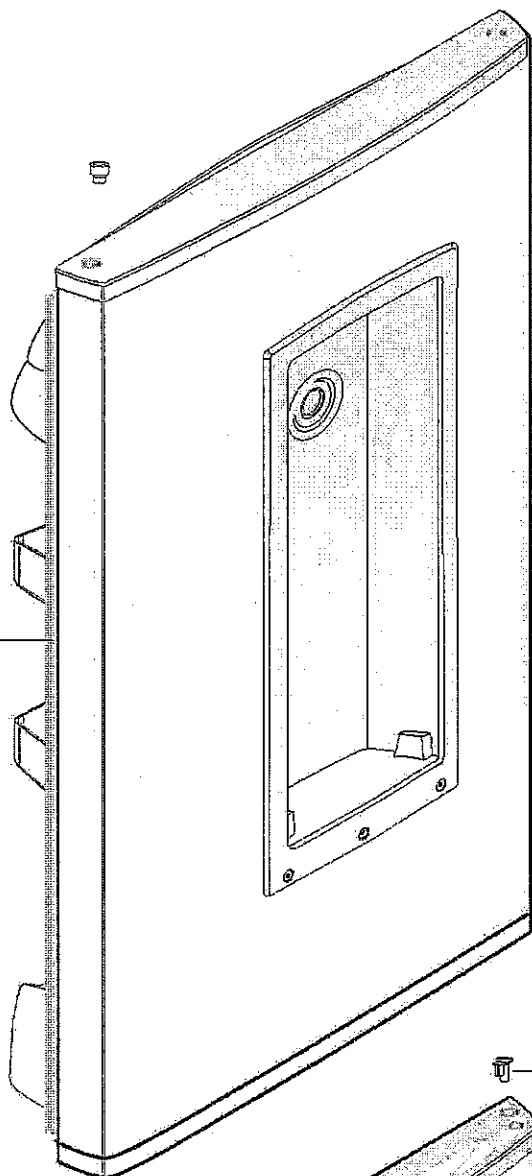

C040




C460

C070




C030

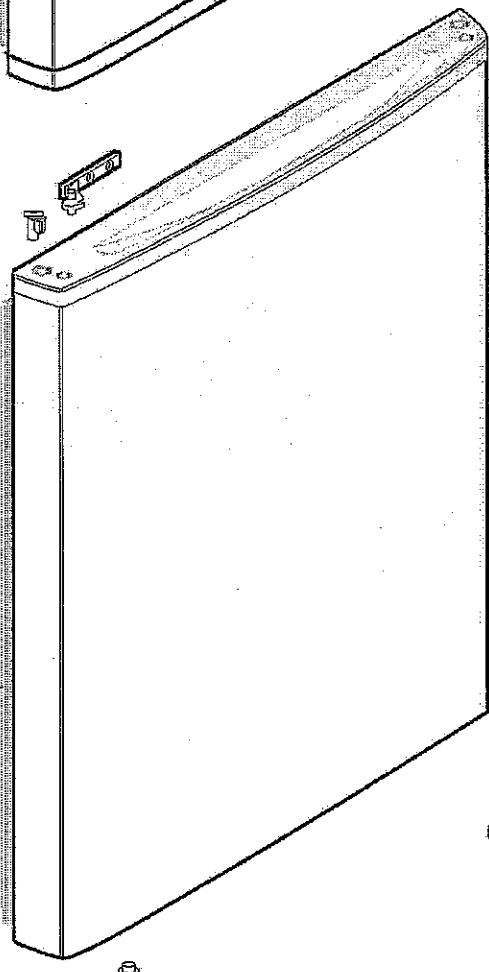


A100


C380

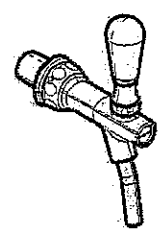

B043

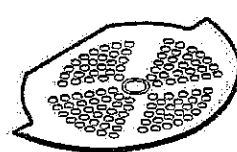

B042

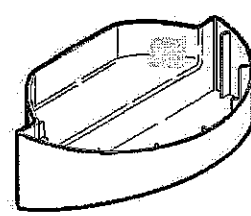

B041






A330

A320

C440

A310

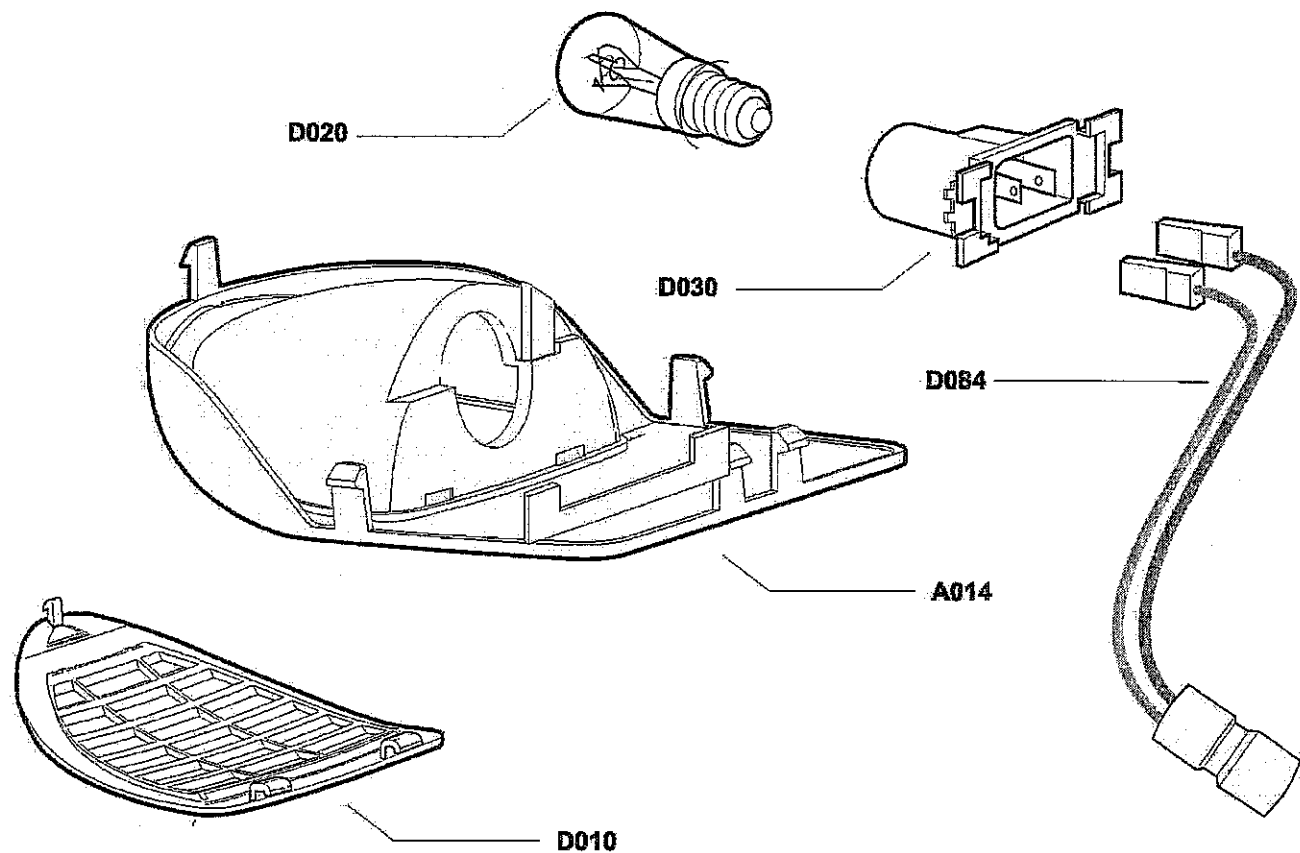


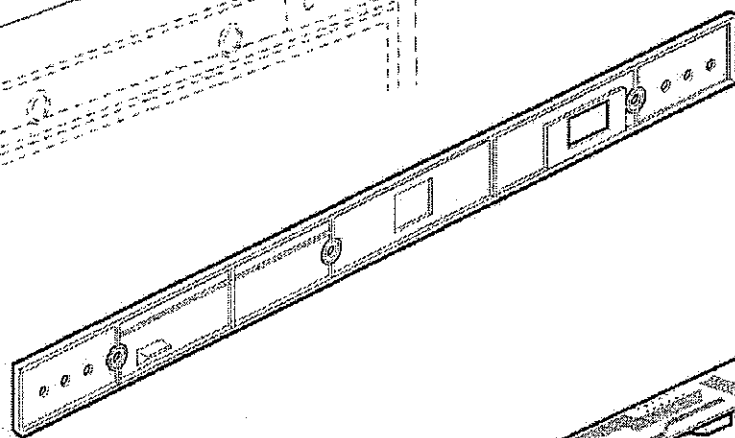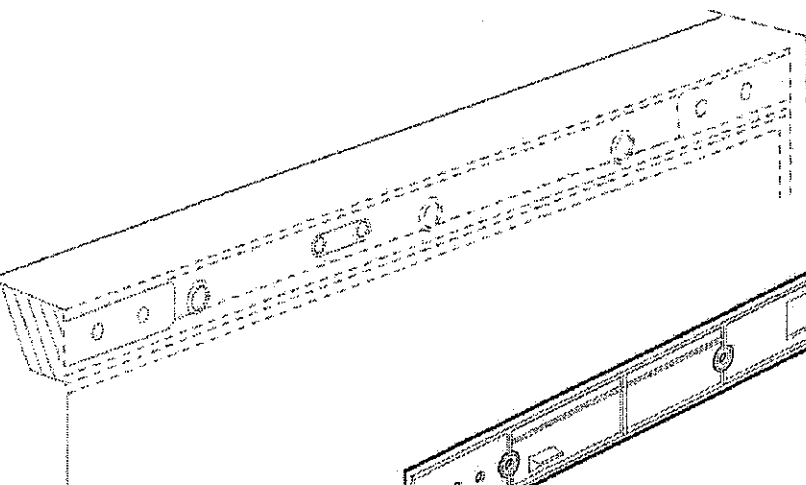

A290



D016

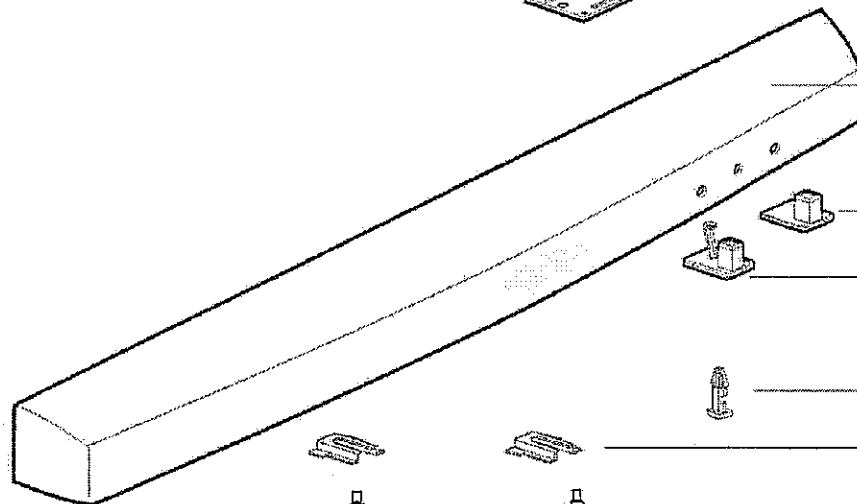

A210



A127



A127



D830




A133






D039

CC09

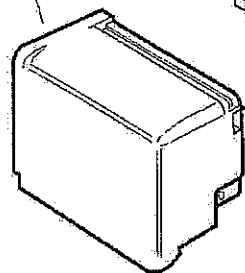

CC025

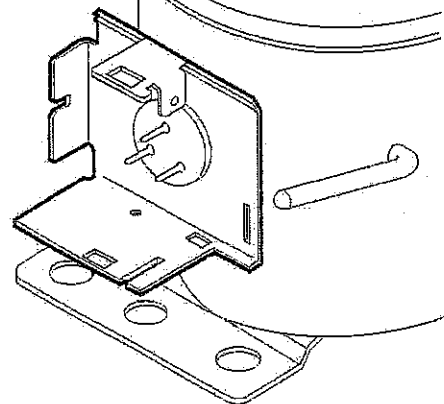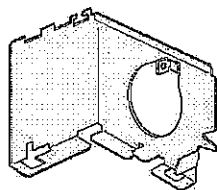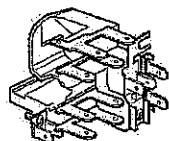

CC10

